



IDIS Cloud Manager Mobile


Operation Manual

App Installation


Android



- 1 Open android **Play Store (Google Play)** on your device.
- 2 In **Play Store (Google Play)**, enter **IDIS Cloud Manager** in the search field.
- 3 Install **IDIS Cloud Manager** and open it.

 To uninstall the **IDIS Cloud Manager**, go to **Settings** → **Applications** → **Manage applications**. Select **IDIS Cloud Manager** and press **Uninstall**.

 This service requires heavy data traffic, and using a Wi-Fi connection is recommended. Using wireless internet (3G, LTE) may result in excessive data charges.


iOS

- 1 Open **App Store**  on your device.
- 2 In **App Store**, enter **IDIS Cloud Manager** in the search field.
- 3 Install **IDIS Cloud Manager** and open it.


 To uninstall the **IDIS Cloud Manager**, press and hold the program icon for 2 seconds and then press the  button.

App Configuration

Launch IDIS Cloud Manager. The following start-up screen will appear.

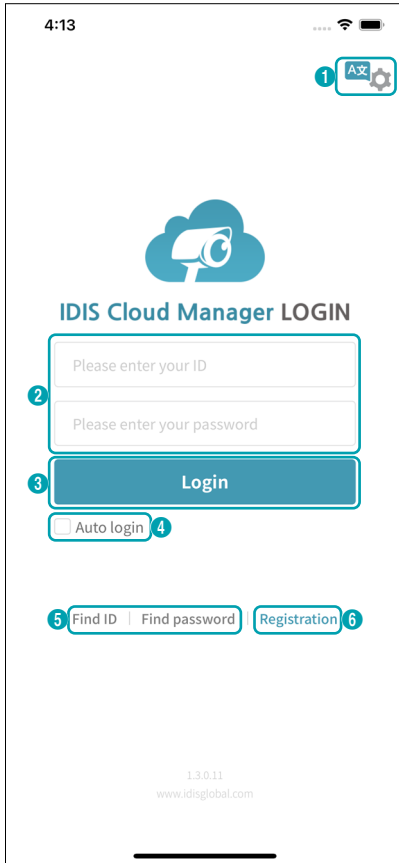

Language Setting

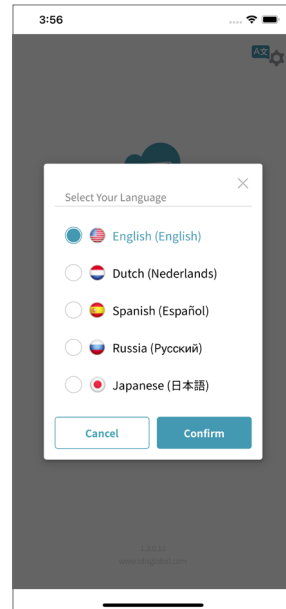

1	Language Setting
2	ID/Password
3	Login
4	Auto Login On/Off
5	Find ID/Password
6	User Registration

Find ID/Password

You can find the ID with the name and email address used for the registration, and you can find the password with the ID and email address used for the registration.

The image shows two side-by-side screenshots of a mobile application interface titled "Find ID / Password".

The left screenshot shows the "Find ID" tab selected. It features two input fields: "Name" (with placeholder "Please enter your name") and "E-mail" (with placeholder "Please enter your email address"). Below these fields is a blue button labeled "Find ID".

The right screenshot shows the "Find password" tab selected. It features two input fields: "ID" (with placeholder "Please enter your ID") and "E-mail" (with placeholder "Please enter your email address"). Below these fields is a blue button labeled "Find password".

The image shows a screenshot of the mobile application interface titled "Find ID / Password".

The screen displays a confirmation message: "Temporary password was sent". Above the message is a circular icon containing an envelope with a keyhole and several stars, representing a password being sent. Below the message is a blue button labeled "Login".

Registration

Agreement on the **Requirement** items are mandatory in order to register.


The image shows two side-by-side screenshots of a mobile application interface for registration.

The left screenshot is titled "Registration". It features a list of checkboxes under "Requirement" and "Option" sections. The "Requirement" section includes: "I agree with all these terms below", "the Terms of Use", "the Privacy Policy", "Collection of Personal information", and "Use of Personal information". The "Option" section includes: "I want to notification for upcoming events". A blue button labeled "Next" is at the bottom.


The right screenshot is titled "Input personal information". It features several input fields and buttons: "ID" (4-16 characters, with a "Check" button), "Passwords" (8-16 characters), "Confirm Passwords" (8-16 characters), "Name" (Please enter your name), "Country" (country dropdown), "E-mail" (Please enter your email address, with a "Verify" button), "Company name" (Please enter your company name), "FEN Server" (dvnames.net dropdown), and "Customer Type" (End User dropdown). A blue button labeled "Registration" is at the bottom.

- 1 Enter an ID and check if it is valid to use.
- 2 Enter a password and confirm.
- 3 Enter your name.
- 4 Select a country.
- 5 Enter your email address and verify the address.
- 6 Enter the company name (optional).
- 7 Select the FEN server and customer type.
- 8 Select **Registration** to complete.

Device List

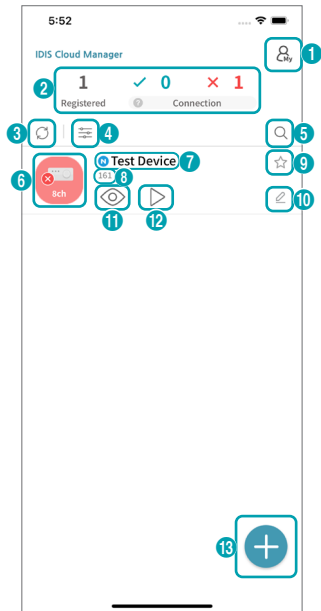

Device Arrangement

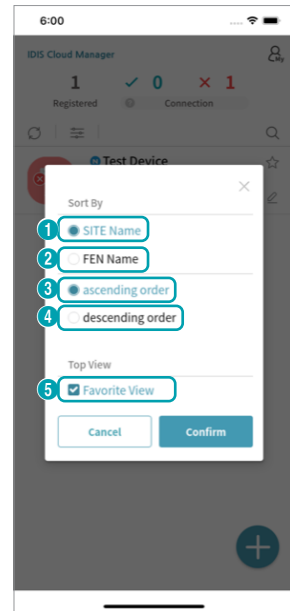

1	My Menu
2	Registered Devices & FEN Server Connection
3	Reload Device Status
4	Device Arrangement Setting
5	Search Device
6	FEN Server Connection Status
7	Device Name
8	FEN Name
9	Edit Favorites
10	Modify Device Information
11	Live
12	Play
13	Add Device

1	Sort By Site Name
2	Sort By FEN Name
3	Sort By Ascending Order
4	Sort By Descending Order
5	Arrange Favorites on Top

Modify Device Information

6:20

Modify device

* SITE Name

1 Test Device

2 Applies same as FEN name

* FEN Name

3 161 Check

* ID

admin

4 Passwords

Do not use password

Modify device

5 Delete

- 1 Edit the device name.
- 2 Select in order to use the FEN name as the device name.
- 3 Edit the FEN name and check if the name is valid.
- 4 Edit the ID and password.
- 5 Delete the registered device.

Add Device

6:27

Add device

* SITE Name

1 Applies same as FEN name

2 Applies same as FEN name

* FEN Name

3 Please enter your FEN name Check

* ID

Please enter your ID


4 Passwords

Please enter your password

Device Registration

- 1 Enter the device name.
- 2 Select in order to use the FEN name as the device name.
- 3 Enter the FEN name and check if the name is valid.
- 4 Enter the ID and password and select **Device Registration** to complete registering the device.

My Menu

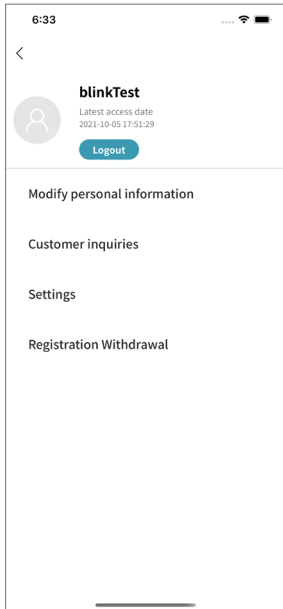


Customer Inquiries

Select an appropriate classification, and enter the title and inquiry. Then select **Confirm** to send the content.




Modify Personal Information

Select **Modify** to edit each information.

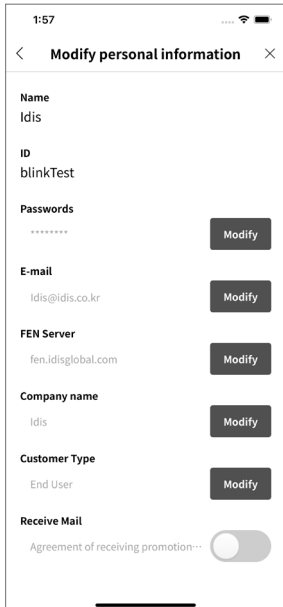


Settings

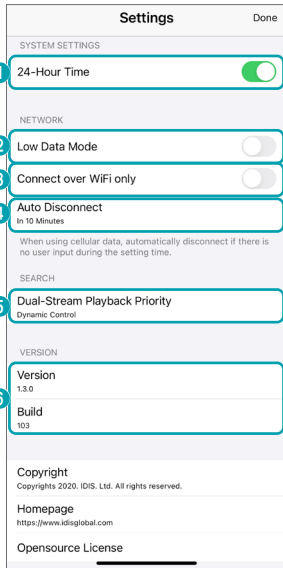

1	Select between 24-hour time and 12-hour time.
2	Runs the app in low data mode.
3	Connects only when using WiFi.
4	Automatically disconnects after a certain amount of time with no use.
5	Select from Dynamic Control/Main Stream Priority/Sub-Stream Priority.
6	Displays the version and build number of IDIS Cloud Manager .

Registration Withdrawal

Select **Confirm** to withdraw the account registration.

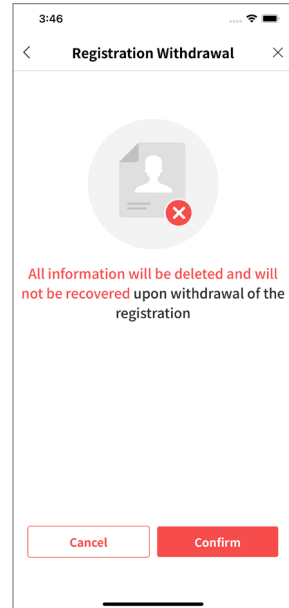
 


Real-time Monitoring and Search


Screen Description




① **List:** Select to turn to the device list.

② **Change Layout:** Select the  (Screen Layout) button or double tap on the camera image to change the screen layout. Clicking the  (Screen Layout) button changes the screen layout in sequence. In 1x1 mode, double tap on the camera image to switch to the previous layout, and in NxN mode, double tap on the camera image to switch to 1x1 mode.


<Horizontal Mode: Image>

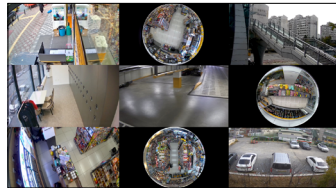


<Horizontal Mode: Image + OSD>

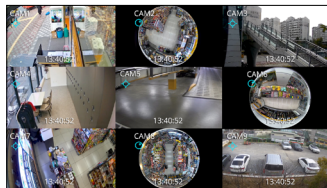



<Horizontal Mode: Image + OSD + Buttons>

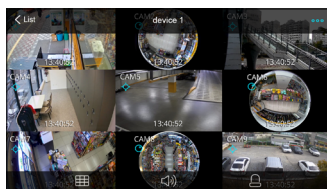


<Vertical Mode: Image + Buttons>

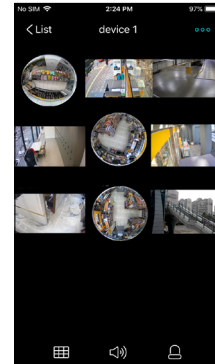


<Vertical Mode: Image + OSD + Buttons>

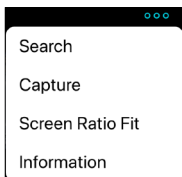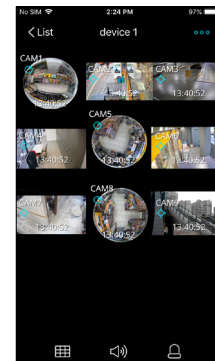

③ **Menu:** Select the  (Menu) button to use the following features.

- **Live/Search:** Switches to live/search screen of the current device.
- **Capture:** Saves the current image as a screenshot.
- **Screen Ratio Fit/Image Ratio Fit:** Fits the image to the screen ratio/image ratio.
- **Information:** Displays the additional information.

Real-time Monitoring


Select the  (Live) button from the registered device list to bring up the image of the device.


NxN Layout






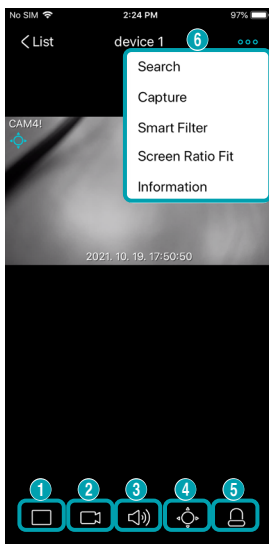

 
- ① **Audio In/Out:** Supports two-way audio with the device.
- ② **Alarm-Out/Beep:** Toggles on/off alarm-out and beep of the device which supports the alarm-out feature.

1x1 Layout

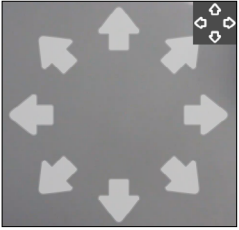


- ① **Change Layout:** Select to change the screen layout of the current image.
- ② **Select Camera:** Switches to the selected camera image.
- ③ **Audio In/Out:** Supports two-way audio with the device.
- ④ **PTZ Camera Control:** Controls the PTZ camera in PTZ mode.
- ⑤ **Alarm-Out/Beep:** Toggles on/off alarm-out and beep of the device which supports the alarm-out feature.
- ⑥ **Menu:** Select the  (Menu) button to use the following features.
 - **Live/Search:** Switches to live/search screen of the current device.
 - **Capture:** Saves the current image as a screenshot.
 - **Smart Filter:** Applies the smart filter to the image.
 - **Screen Ratio Fit/Image Ratio Fit:** Fits the image to the screen ratio/image ratio.
 - **Information:** Displays the additional information.

PTZ Control

Pan	View Presets	Control Buttons		
	 			
<p>Use the arrow buttons or ePTZ control (finger drag) to move the image.</p>	<p>Preset</p> <p>#1 gg</p> <p>#2 set</p> <p>#3 side</p>	<p>Zoom In/ Out</p>	<p>Near/Far Focus</p>	<p>Auto Focus</p>

Smart Filter

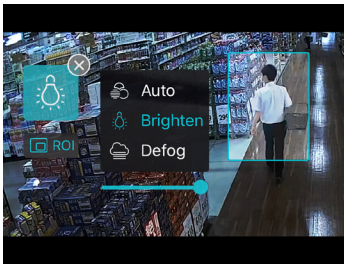

- **Auto:** Automatically applies the filter to the image to improve the resolution.
- **ROI:** Select the ROI (Region Of Interest).
- **Brighten:** Adjusts the brightness of the screen.
- **Defog:** Applies the defog filter to the screen.

Search

Select the  (Search) button from the registered device list to bring up the image of the device.





- ① **Go to Beginning:** Moves to the first video among the recorded data.
- ② **High-speed Rewind:** Plays the recorded video in high-speed in reverse. The number of tap on the button changes the speed.
- ③ **Go to Previous Frame:** Moves to the previous frame.
- ④ **Play:** Plays the recorded video displayed on the current screen.
- ⑤ **Go to Next Frame:** Moves to the next frame.
- ⑥ **High-speed Playback:** Fast-forwards the recorded image. The number of tap on the button changes the speed.
- ⑦ **Go to End:** Moves to the latest video among the recorded data.
- ⑧ **Change Layout:** Select to change the screen layout of the current image.
- ⑨ **Select Camera:** Switches to the selected camera image.
- ⑩ **Time Search:** Searches for images of specific date and time among the recorded data.
- ⑪ **Event Search:** Searches for images with specific events. Select search period and camera, and select event types.




Network cameras and network video server can search only the events detected during SD memory card recording.

Select Time

Event Search

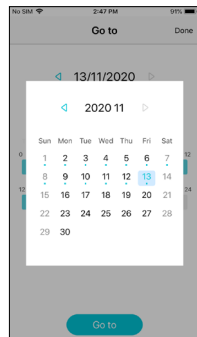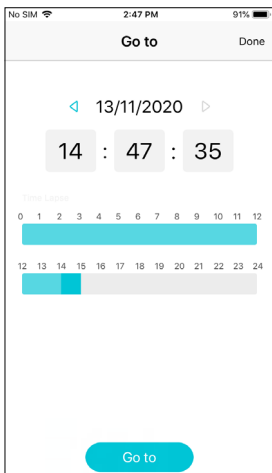


Done		
11	44	32
12	45	33
13	46	34
14	47	35
15	48	36
16	49	37

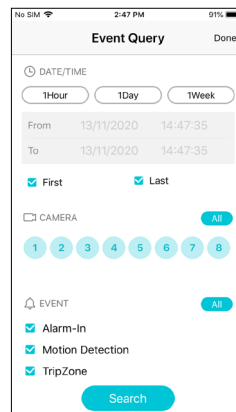

Fisheye Dewarping

The dewarping button (🕒) is activated for fisheye cameras in 1x1 layout. Using the dewarping function corrects the distortion of the fisheye image.

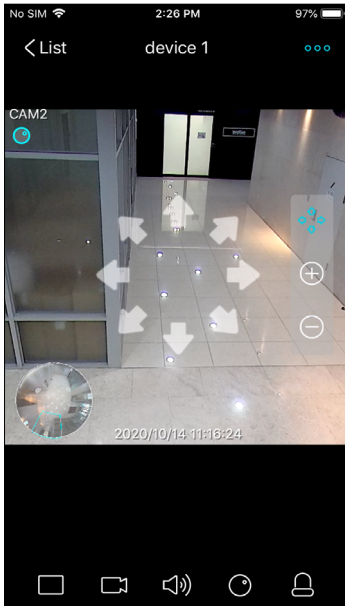

Pressing the 🕒 button displays PIP image with zoom in/out and dewarping control menu.

- Use fingers for zoom in/out action or use +, - buttons of the control menu to zoom in/out.



Zoom in/out action: Pinching or spreading two points on the screen with fingers

- Drag the image with a finger to move in the corresponding direction.
- Pressing the 🕒 button again exits the fisheye mode and returns to the original image.

Digital Zoom

Use fingers for zoom in/out action in 1x1 layout to use the digital zoom feature.



Zoom in/out action: Pinching or spreading two points on the screen with fingers



- PIP image is displayed when OSD display is activated.
- Drag with fingers to see the zoomed in part of the whole camera image.
- Zoom out on the image until the whole image is displayed in order to end the digital zoom action.



IDIS Co., Ltd.

For more information, please visit at
www.idisglobal.com