


1 Connect a HDD from a NVR

Take out a HDD from a NVR, and install it in your PC with SATA port.

In Computer Management, see if the HDD is well-recognized by the PC as the image below shows.

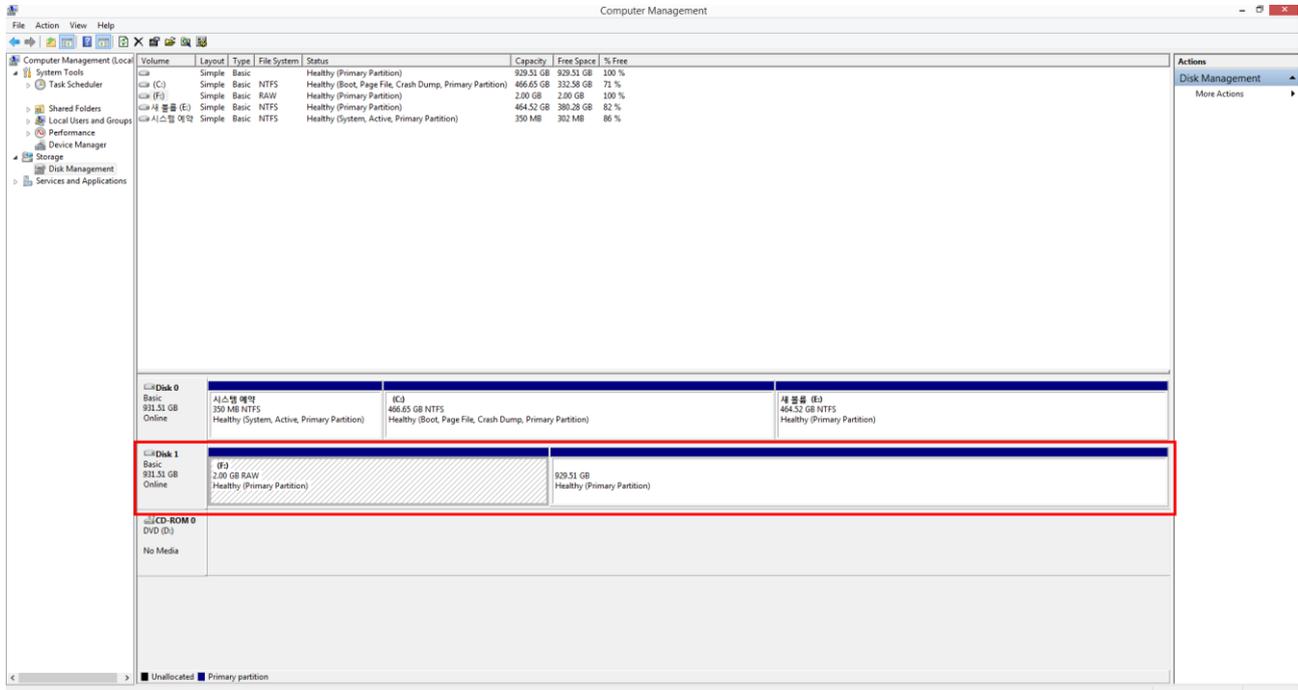

2 IDIS Center for iHDP

Run IDIS Center for iHDP(The application is added in v4.2.0 or higher).




- ※ "IDIS Center for iHDP" is automatically installed while in installing IDIS Center v4.2.0 or higher.
- ※ "IDIS Center for iHDP" is a mode of easier and quicker access to iHDP, which means a user can use IDIS Center to access iHDP feature.


Once IDIS Center for iHDP is opened, IDIS Center for iHDP will load a HDD that has been moved from a NVR

3 Playback a HDD in IDIS Center for iHDP

The camera channels which had been recorded in a HDD will be listed up in Device on the right side.

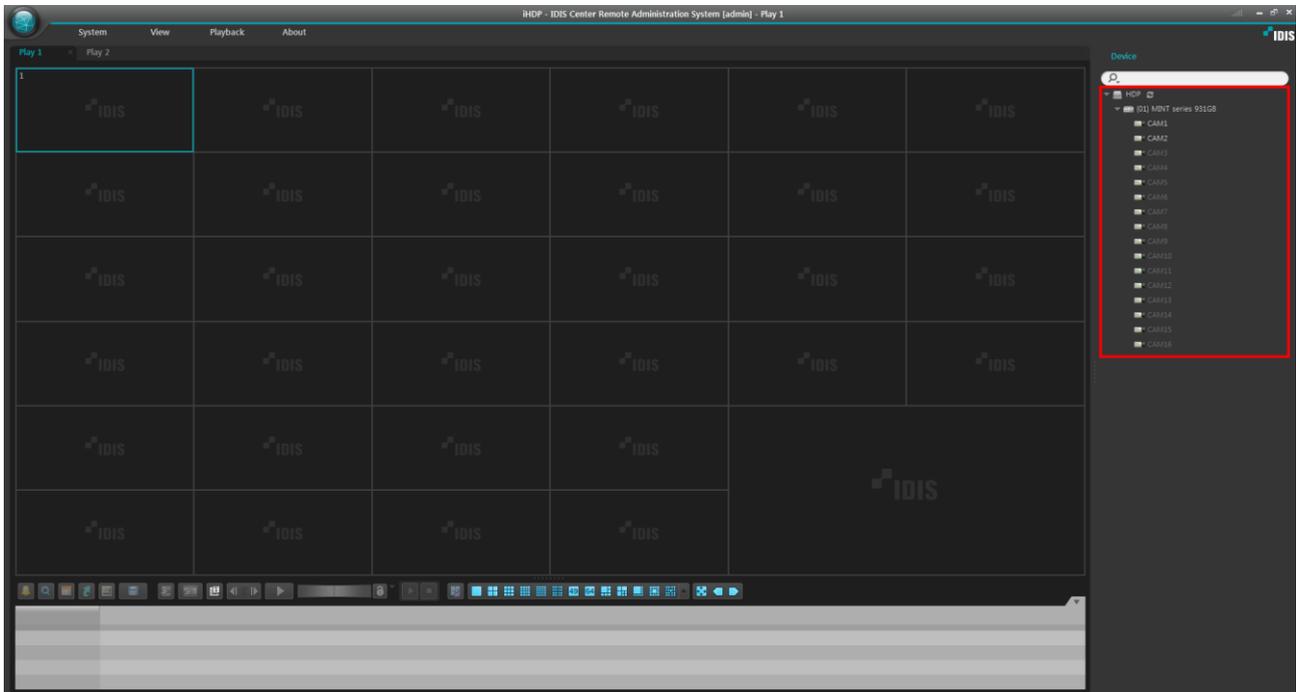

Simply drag and drop a channel that you would like to playback to on a camera pane.

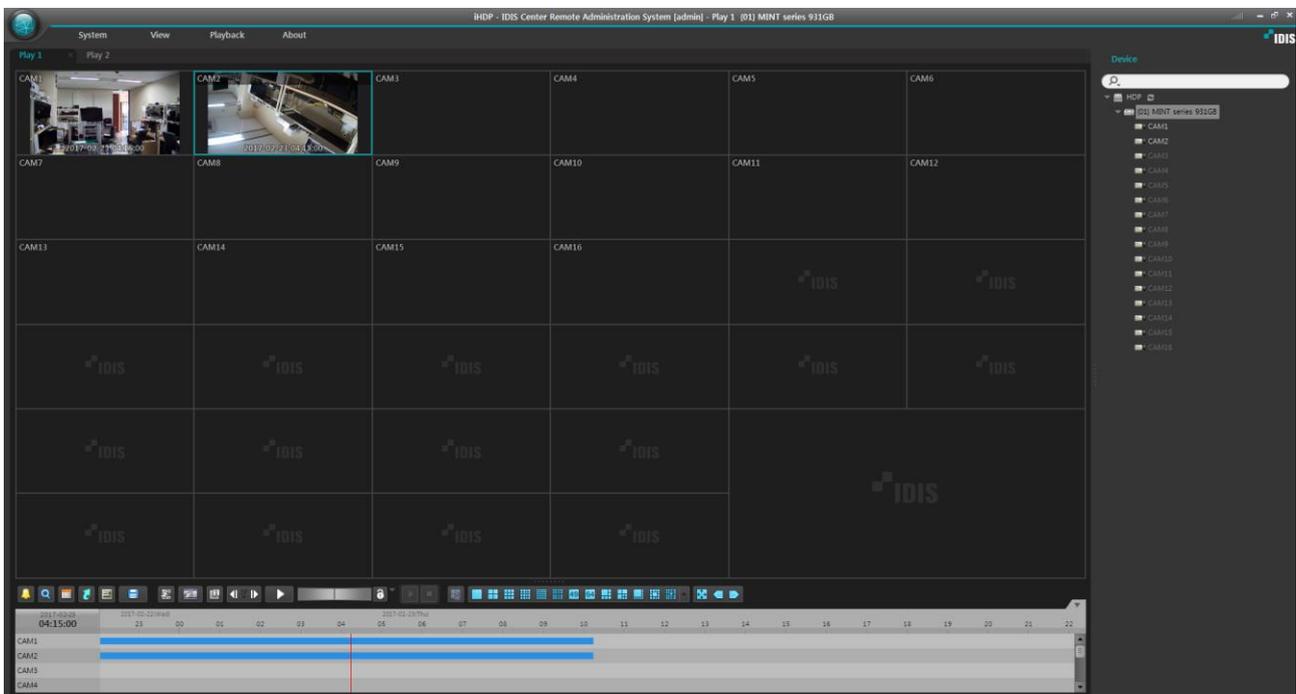

4 Playback a HDD in IDIS Solution Suite Client

Run "IDIS Solution Suite Run as Administration" to get authority to access HDDs.

In IDIS Solution Suite Client, device info including a NVR and cameras in a HDD will appear under HDP category on the right side. Go to a DVR Search tab and drag and drop to playback

