

# DC-D4511WERX, DC-D4531WERX Configuration Guide for IDIS NVR

Version 1.0.0  
(Sep. 8. 2021)

## Table of Contents

<b>1</b>	<b>Introduction</b>	<b>3</b>
<b>2</b>	<b>Network Setup</b>	<b>3</b>
<b>3</b>	<b>Camera Basic Web Setup</b>	<b>4</b>
3.1	Camera Password Setup	4
3.2	Camera IP Address Setup	5
3.3	Camera Stream Profile Setup	6
3.4	Camera Motion Event Setup	7
<b>4</b>	<b>Camera Registration</b>	<b>8</b>
4.1	Camera Registration Page	8
4.2	Camera is in Link-local IP range	9
4.3	Cameras in DHCP or Static IP settings	11
<b>5</b>	<b>Limitations</b>	<b>13</b>
<b>6</b>	<b>Appendix</b>	<b>13</b>
6.1	Device Reset	13
6.2	Device Config Tool	15
6.2.1	Installation	15
6.2.2	Device Search	15
6.2.3	Search Tab	18
6.2.4	Upgrade Tab	18
6.2.5	Config Tab	20
6.2.6	Stream Config Tab	22
6.2.7	OSD Config Tab	22
6.2.8	Change Password Tab	23
6.3	Camera Webpage	24
6.3.1	Live Tab	24
6.3.2	Playback Tab	25
6.3.3	Remote Setting Tab(Camera Configurations)	26
6.3.4	Channel Settings	27
6.3.5	Record Settings(Stream Profile settings)	28
6.3.6	Event Settings	29
6.3.7	Network Settings	30
6.3.8	Device Settings	33
6.3.9	System Settings	34
	<b>Version History</b>	<b>37</b>

## 1 Introduction

This document will be explaining how to set up and register IDIS 5MP Turret Cameras DC-D4511WERX and DC-D4531WERX.

## 2 Network Setup

DC-D4511WERX and DC-D4531WERX require PC connections to set up cameras.

IDIS NVR has separated 2 networks (Video-In network, Network client (WAN network)).


There are several possible connections.

### a. Camera – PC connection


1) Proceed Camera configuration first.




2) Register cameras to NVR

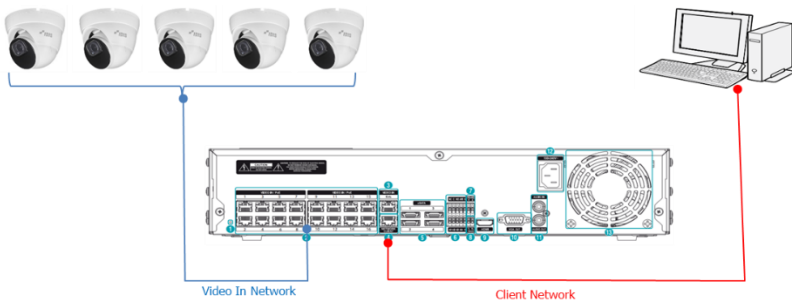

### b. Camera – NVR connection(NVR PoE ports)

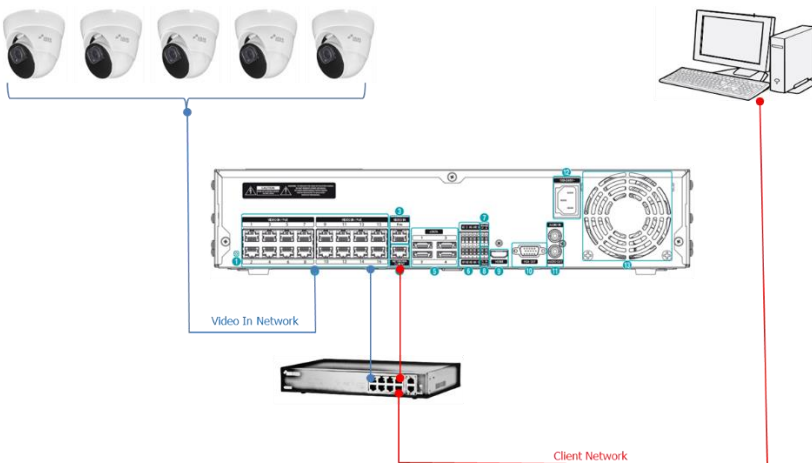

c. Camera – NVR connection (PoE switch)

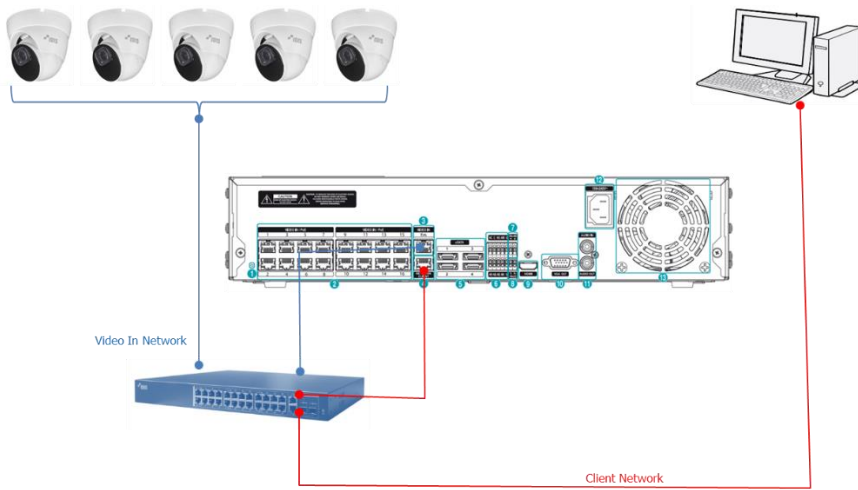

### 3 Camera Basic Web Setup

In this chapter, basic camera web setup for IDIS Products will be explained.

Device Config Tool must be installed prior to this task. (Go to section 6.2 for more details about Device Config Tool.


#### 3.1 Camera Password Setup

Password needs to be set up to access the camera webpage and register a camera to NVR.


No.	IP	Media Por	Web Port	Channel	Device Name	Device Type	Device Version	Net Mask	Gateway	MAC	Network Mode	P2P ID	Status
<input type="checkbox"/>	<a href="#">192.168.1.168</a>	9000	80	1	DC-D4511WERX 2.8mm	IP CAMERA	V21.45.7.1_210722	255.255.255.0	192.168.1.1	00-23-63-90-88-1B	DHCP		
<input type="checkbox"/>	<a href="#">192.168.1.169</a>	9000	80	1	DC-D4531WERX	IP CAMERA	V21.45.7.1_210722	255.255.255.0	192.168.1.1	00-23-63-90-88-25	Static		

From Device Config Tool, click highlighted camera IP to access the camera webpage.

When accessing the webpage for the first time, a password setup is required. Password must be set for further configuration.

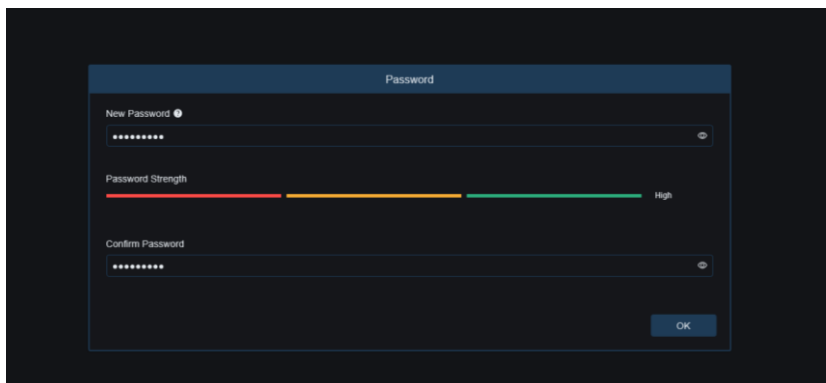


Password Recovery menu is not used, click Cancel.

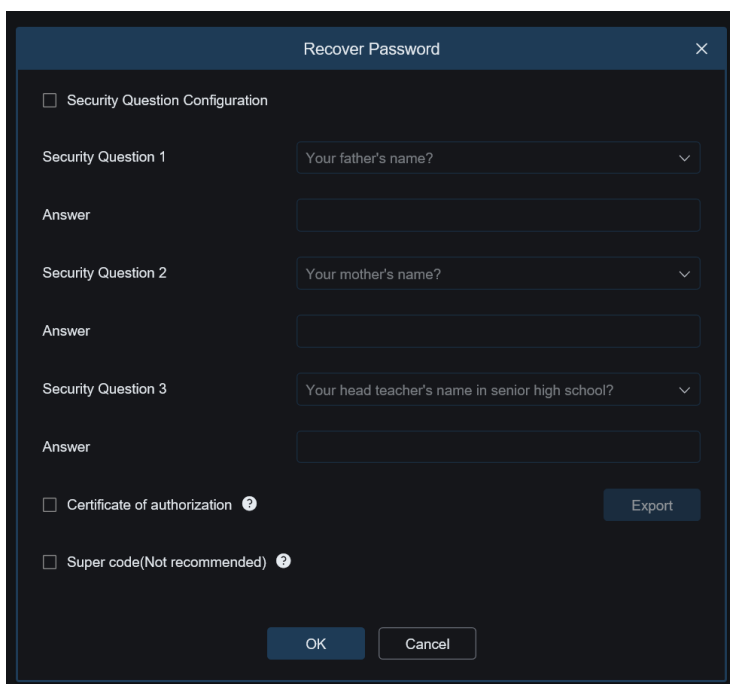

### 3.2 Camera IP Address Setup

When the first time accessing camera webpage, it is recommended to set up an individual IP address for a camera. The default camera IP setting is static.

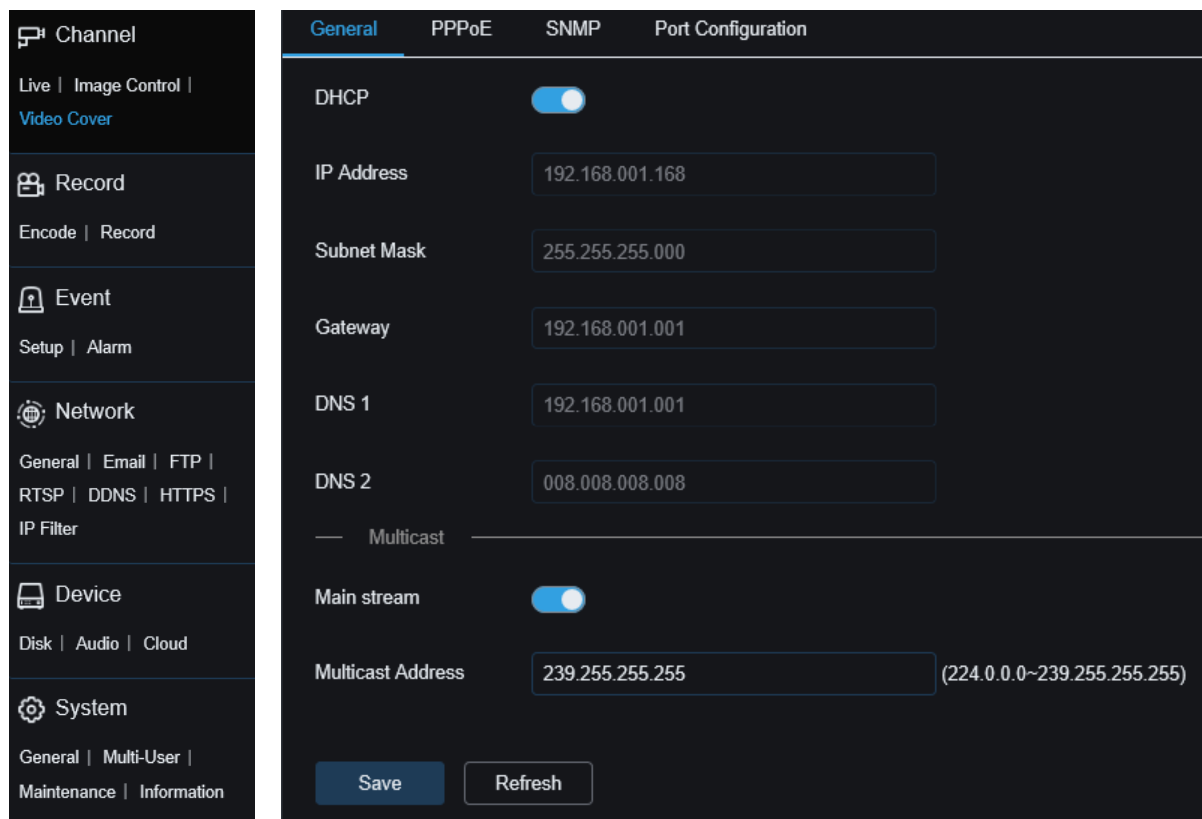


Go to Network – General to set up IP address.

### 3.3 Camera Stream Profile Setup

Stream Profile settings are available on Record – Encode page.


**Note:** The camera has 3 streams but IDIS NVR will use only MainStream and SubStream.

For IDIS Products, audio recording is not supported via Onvif protocol.

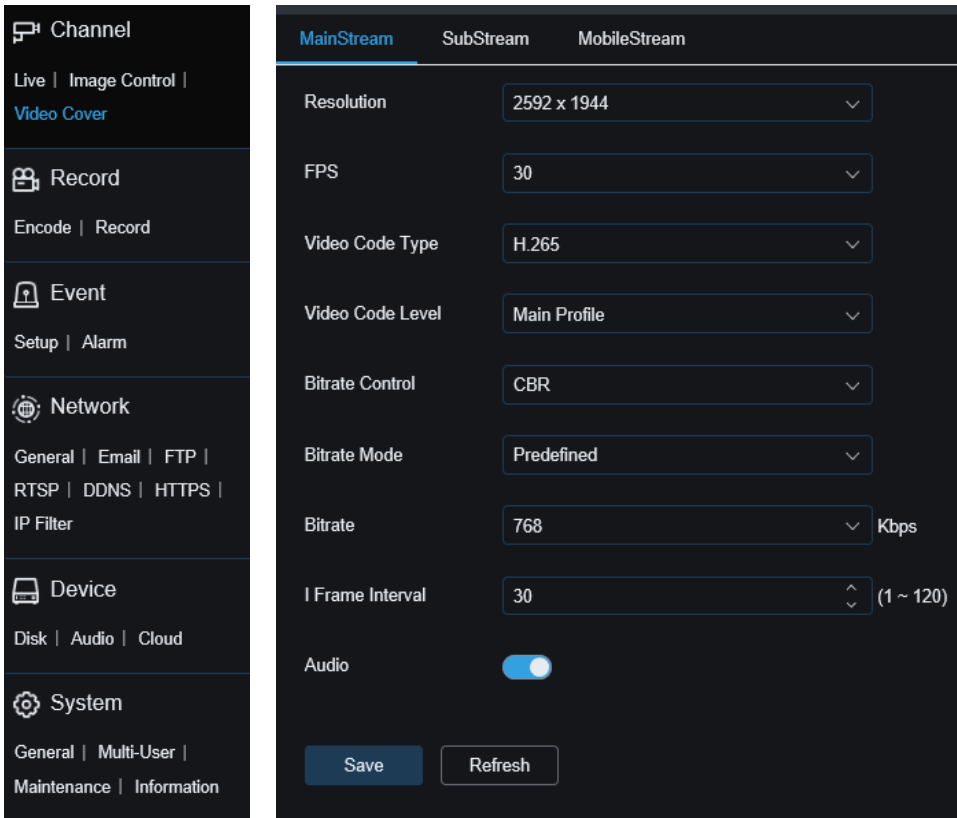

### 3.4 Camera Motion Event Setup

Motion settings are available on Event – Setup page.

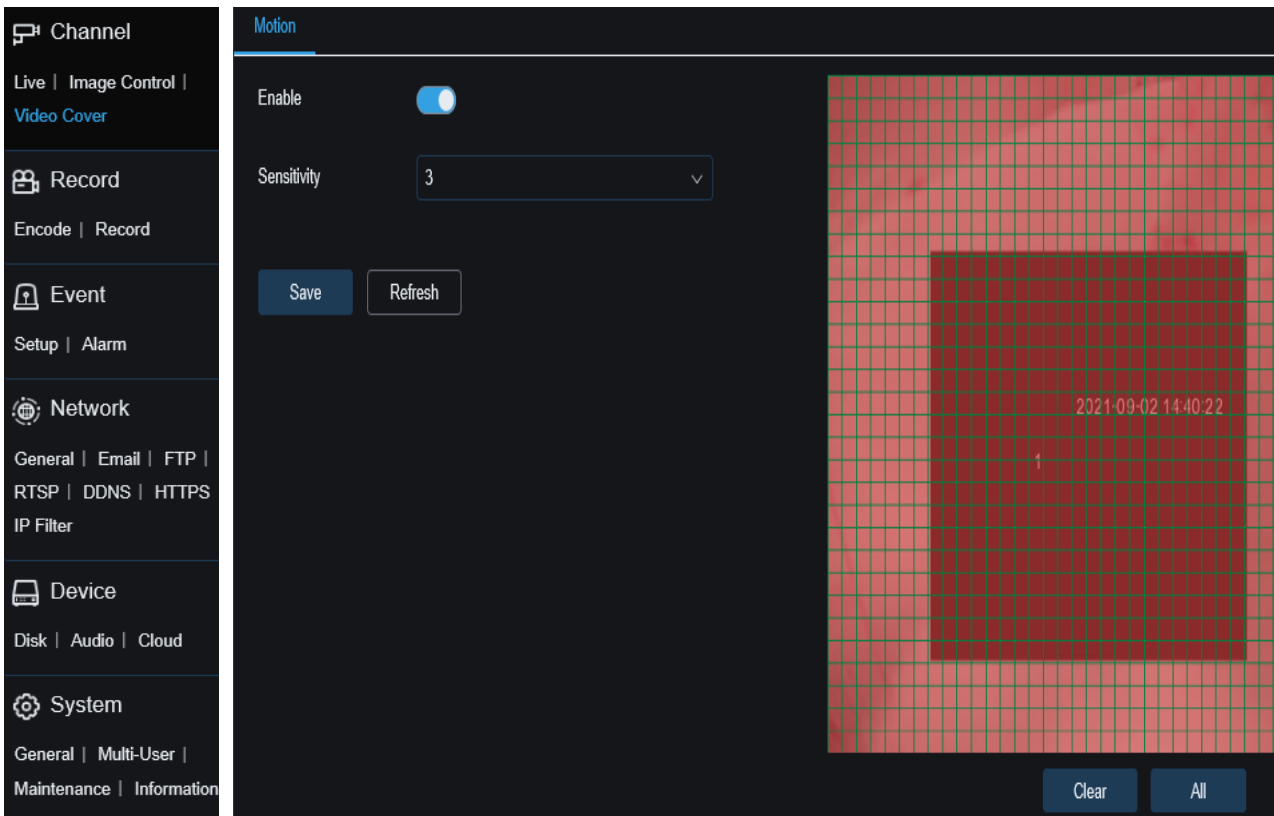

Motion event should be enabled on NVR menu – Event – Video Analytics – Motion page.

No.	Sensitivity	Zone	Min. Blocks	Etc.	Condition	Actions
<input checked="" type="checkbox"/> 1	3/3	330	1/1	Etc.		
<input type="checkbox"/> 2	3/3	330	1/1	Etc.		
<input type="checkbox"/> 3	3/3	330	1/1	Etc.		
<input type="checkbox"/> 4	3/3	330	1/1	Etc.		
<input type="checkbox"/> 5	3/3	330	1/1	Etc.		
<input type="checkbox"/> 6	3/3	330	1/1	Etc.		
<input type="checkbox"/> 7	3/3	330	1/1	Etc.		
<input type="checkbox"/> 8	3/3	330	1/1	Etc.		
<input type="checkbox"/> 9	3/3	330	1/1	Etc.		
<input type="checkbox"/> 10	3/3	330	1/1	Etc.		
<input type="checkbox"/> 11	3/3	330	1/1	Etc.		
<input type="checkbox"/> 12	3/3	330	1/1	Etc.		
<input type="checkbox"/> 13	3/3	330	1/1	Etc.		
<input type="checkbox"/> 14	3/3	330	1/1	Etc.		
<input type="checkbox"/> 15	3/3	330	1/1	Etc.		
<input type="checkbox"/> 16	3/3	330	1/1	Etc.		

Ignoring Interval: 2 sec. Daytime Setup

Default Apply OK Cancel


## 4 Camera Registration

### 4.1 Camera Registration Page


This will guide camera registration to IDIS NVR.

Note: NVR default Video-in IP address is set to Link-Local IP address(169.254.x.x)


1. Enter camera registration and go to Scan – Thrid Party Scan menu

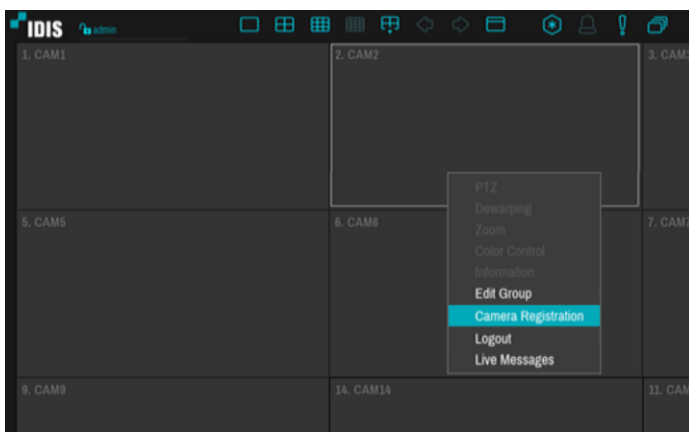




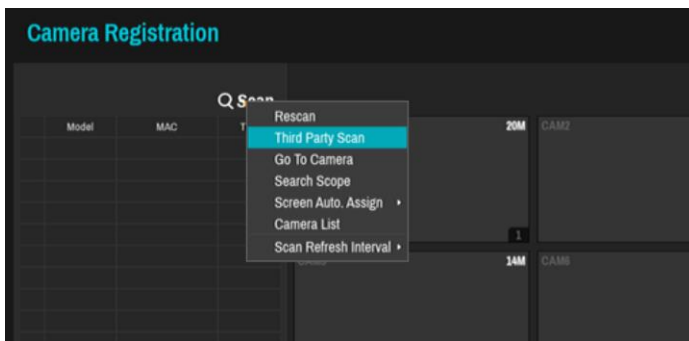

2. Select Protocol as 'Onvif Conformance'

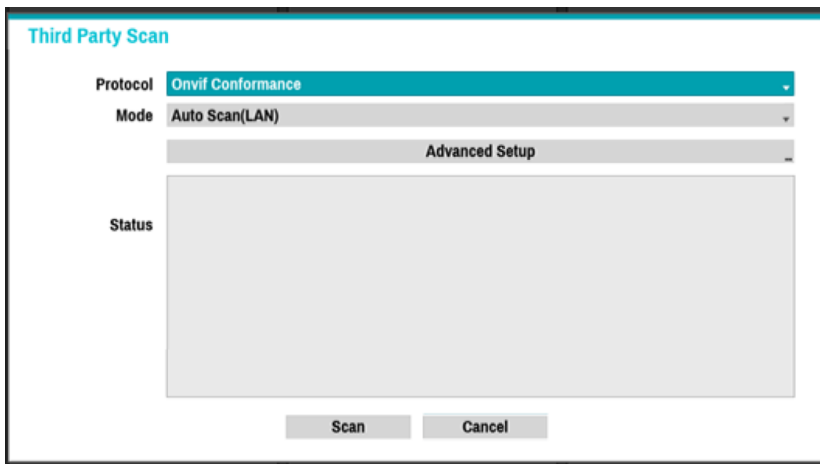


3. Enter Advanced Setup to setup IP address of NVR video-in network

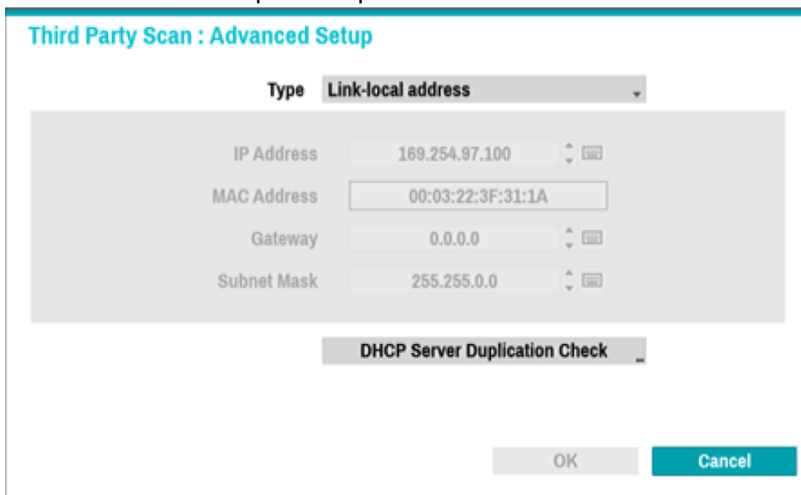


This Camera support both Link-local address IP range and static(DHCP) IP address, select desired IP address

## 4.2 Camera is in Link-local IP range


- a. When Link-local IP is set from step 3. Click scan to discover devices

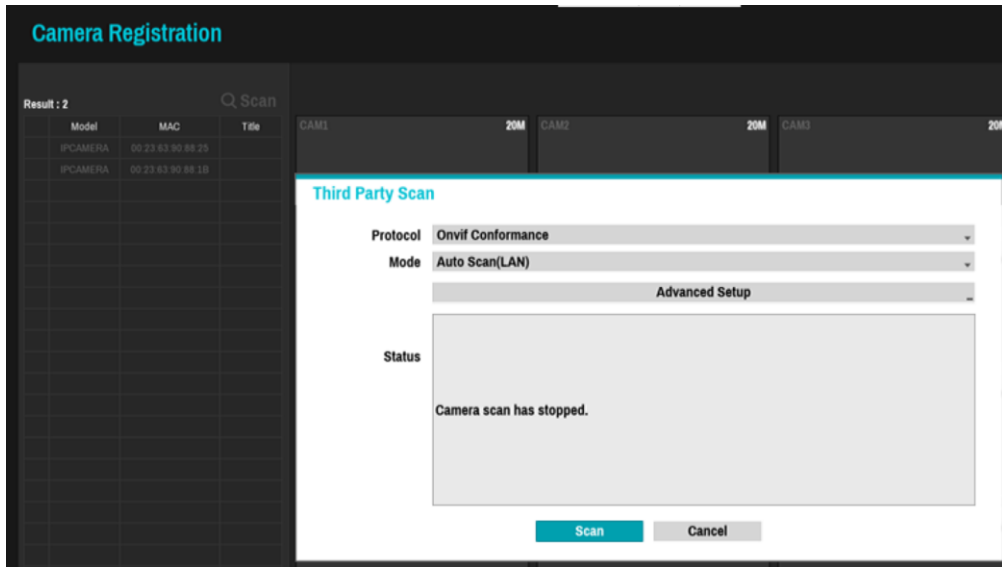


- b. Cameras will appear on the list (Clicking Title header will change display mode from MAC address to IP address)

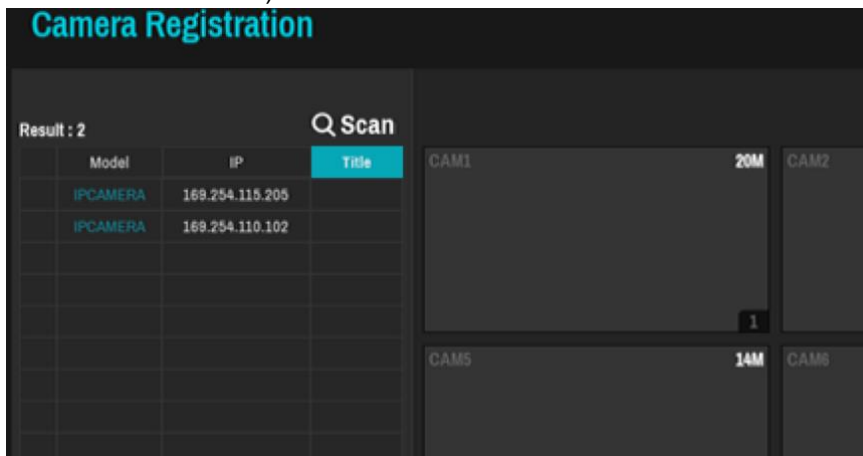


- c. Drag and drop a camera from device list and enter login detail.

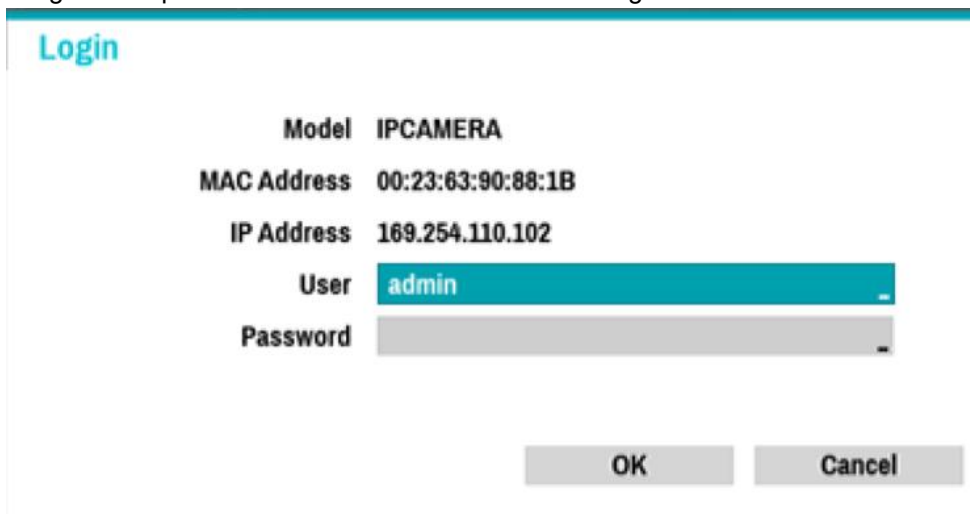

- d. DC-D4511WERX, DC-D4531WERX are using Onvif protocol. Hence, the following notification will appear. Click OK.

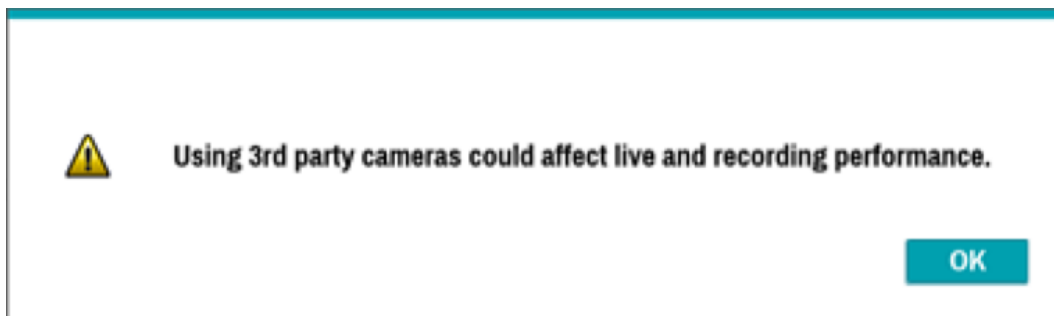



- e. Cameras are successfully registered (Video image is off in this manual).

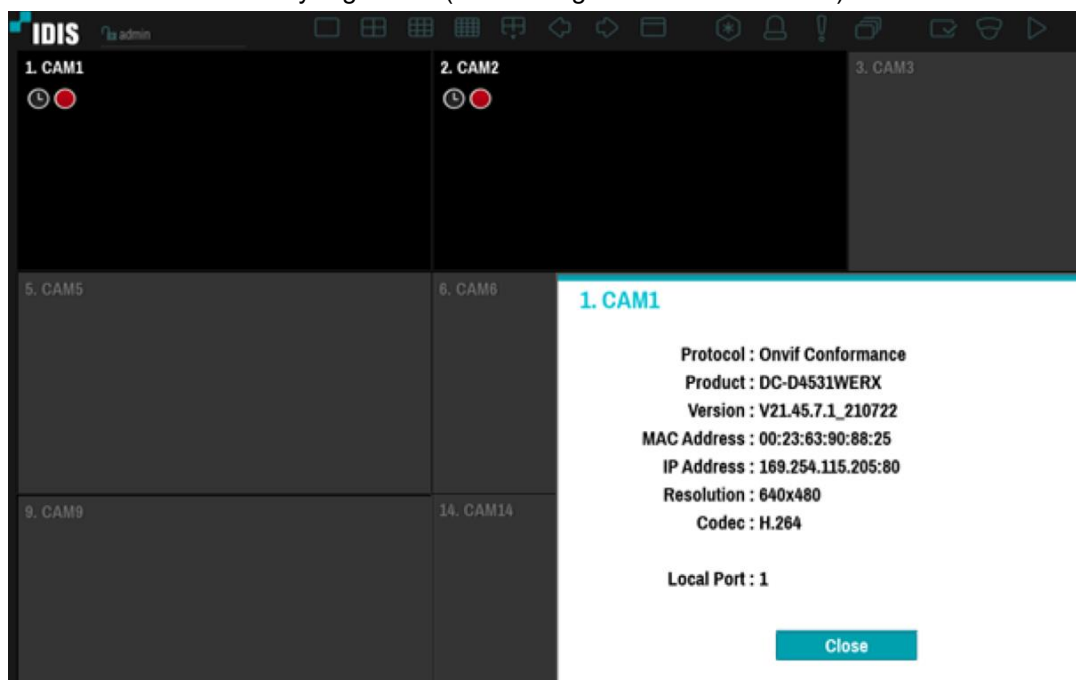

### 4.3 Cameras in DHCP or Static IP settings

- a. When Manual(DHCP) is set from step 3. Click scan to discover devices

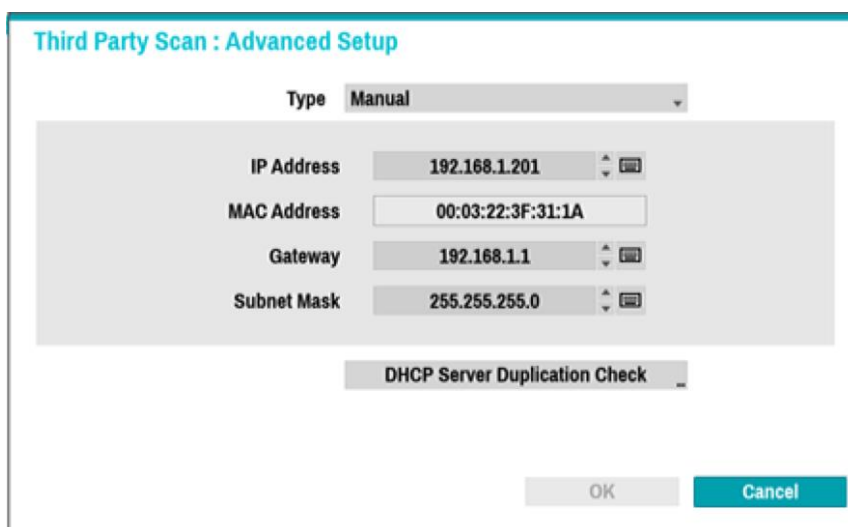


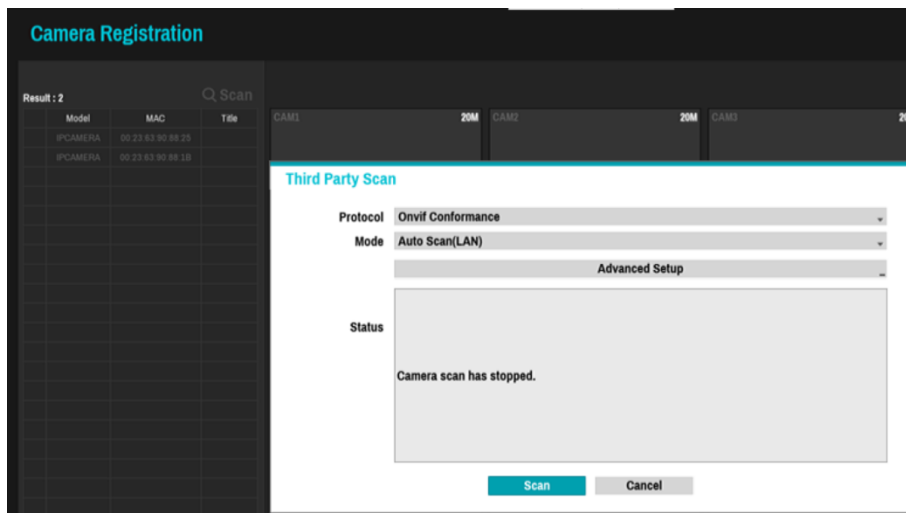


- b. Cameras will appear on the list (Clicking Title header will change display mode from MAC address to IP address)




- c. Drag and drop a camera from device list and enter login detail.

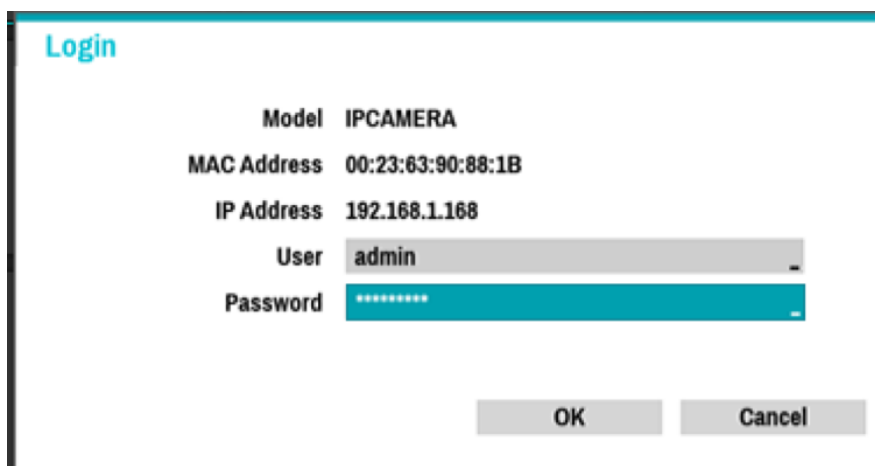

- d. DC-D4511WERX, DC-D4531WERX are using Onvif protocol. Hence, the following notification will appear. Click OK.

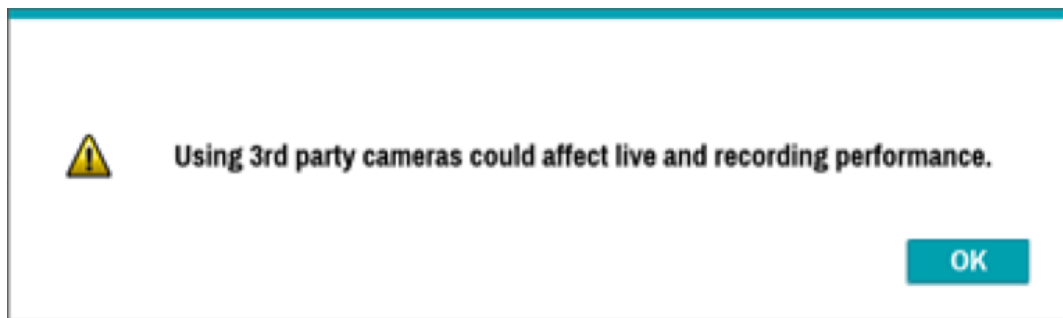

- e. Cameras are successfully registered (Video image is off in this manual).

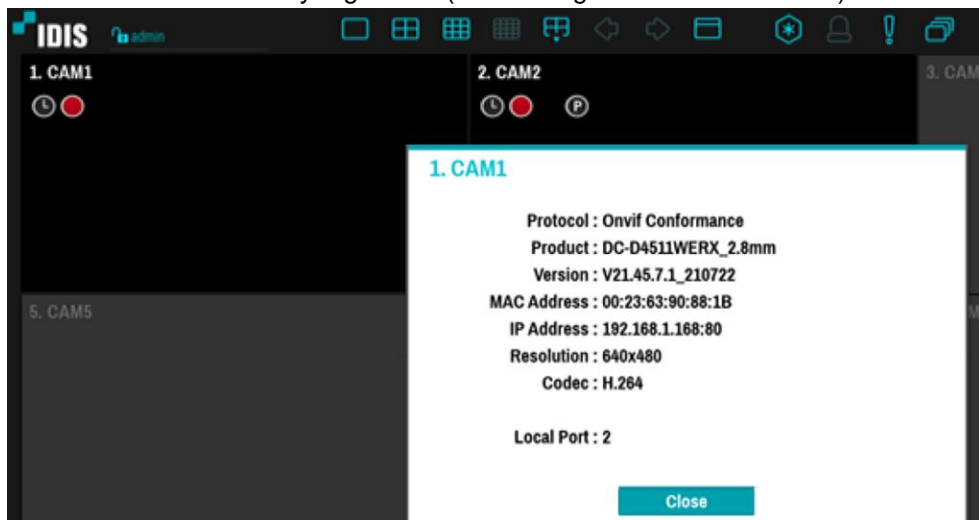

## 5 Limitations

IDIS DC-D4511WERX and DC-D4531WERX have a couple of limitations as follows.

1. Camera needs to be registered via Onvif protocol.
2. Camera stream settings are not displayed on NVR – Camera – Stream menu. (It is displayed well in the NVR live pane)
3. Camera audio recording is not supported on IDIS devices.

## 6 Appendix

### 6.1 Device Reset

There are 2 ways to reset the camera. The first is using reset button and the second is using Device Config Tool.

- a. Device reset by a reset switch



DC-D4511WERX

DC-D4531WERX

Press the reset button for 10 seconds while a camera is plugged in.

- b. Device reset by Device Config Tool.  
Please refer to the section 6.2.5 - c
- c. Device reset by Camera webpage  
Please refer to the section 6.3.9 – c

## 6.2 Device Config Tool

Device Config Tool is required to do the initial setup and discover devices in a network.


Download Link:

[https://idisglobal-admin.s3-accelerate.amazonaws.com/support\\_download/Device+Config+Tool.exe](https://idisglobal-admin.s3-accelerate.amazonaws.com/support_download/Device+Config+Tool.exe)

### 6.2.1 Installation

1. Download Device Config Tool and run
2. After installation run Device Config Tool

Device Search Tool Main Page

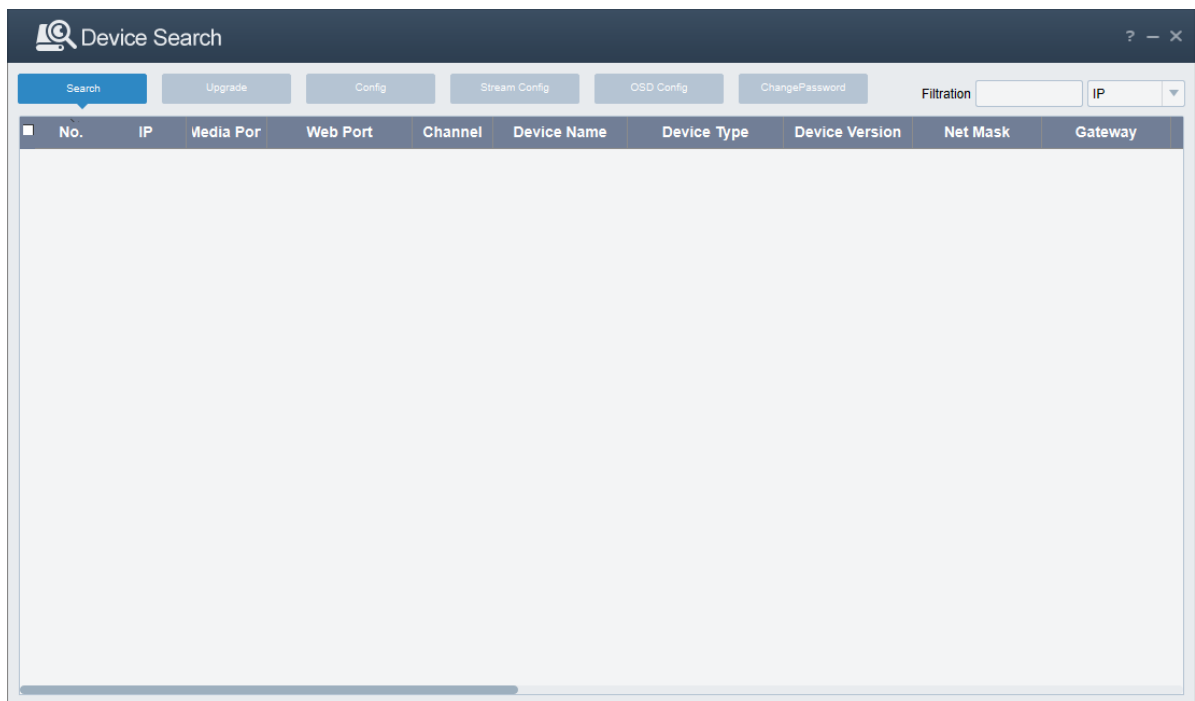

### 6.2.2 Device Search

Connect the PC to the camera video network and click Search. Cameras will show up on the list

The screenshot shows the 'Device Search' window with a table of devices. The table has columns for No., IP, Media Port, Web Port, Channel, Device Name, Device Type, Device Version, Net Mask, Gateway, MAC, Network Mode, P2P ID, and Status. Two devices are listed: DC-D4511WERX and DC-D4531WERX, both IP cameras with the same network settings.

No.	IP	Media Port	Web Port	Channel	Device Name	Device Type	Device Version	Net Mask	Gateway	MAC	Network Mode	P2P ID	Status
1	192.168.1.168	9000	80	1	DC-D4511WERX 2.8mm	IP CAMERA	V21.45.7.1_210722	255.255.255.0	192.168.1.1	00-23-63-90-88-1B	DHCP		
2	192.168.1.169	9000	80	1	DC-D4531WERX	IP CAMERA	V21.45.7.1_210722	255.255.255.0	192.168.1.1	00-23-63-90-88-25	Static		

Network settings can be changed by clicking a camera from the list.

The screenshot shows the 'Device Search' window with the configuration form for the first camera (DC-D4511WERX) selected. The form includes fields for User Info (Username: admin, Password) and Device Info (IP: 192.168.1.168, Media Port: 9000, Web Port: 80, Gateway: 192.168.1.1, Net Mask: 255.255.255.0, Net Mode: DHCP). A 'Modify' button is visible at the bottom right.

No.	IP	Media Port	Web Port	Channel	Device Name	Device Type	Device Version	Net Mask	Gateway	MAC	Network Mode	P2P ID	Status
1	192.168.1.168	9000	80	1	DC-D4511WERX 2.8mm	IP CAMERA	V21.45.7.1_210722	255.255.255.0	192.168.1.1	00-23-63-90-88-1B	DHCP		
2	192.168.1.169	9000	80	1	DC-D4531WERX	IP CAMERA	V21.45.7.1_210722	255.255.255.0	192.168.1.1	00-23-63-90-88-25	Static		


User Info: Username: admin, Password: [ ]

Device Info: IP: 192.168.1.168, Media Port: 9000, Web Port: 80, Gateway: 192.168.1.1, Net Mask: 255.255.255.0, Net Mode: DHCP


Modify




Camera remote page can be accessed by clicking Hyperlink on the IP column

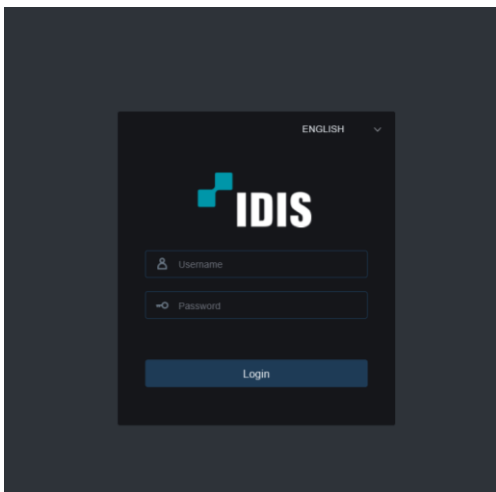

When accessing the webpage for the first time, password setup is required. Password must be set for further configuration.

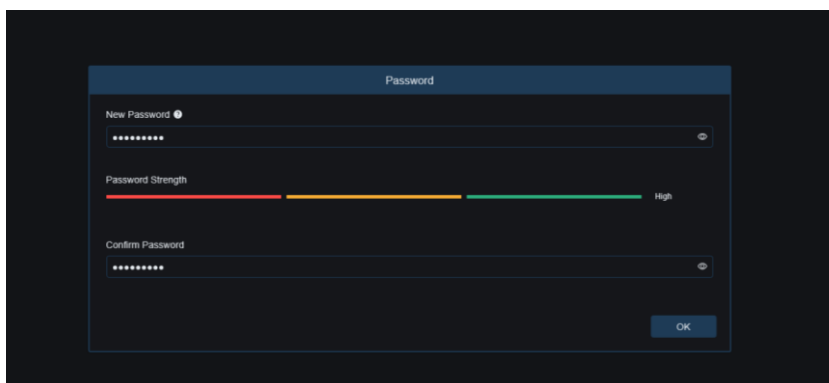

Password Recovery menu is not used, click Cancel.

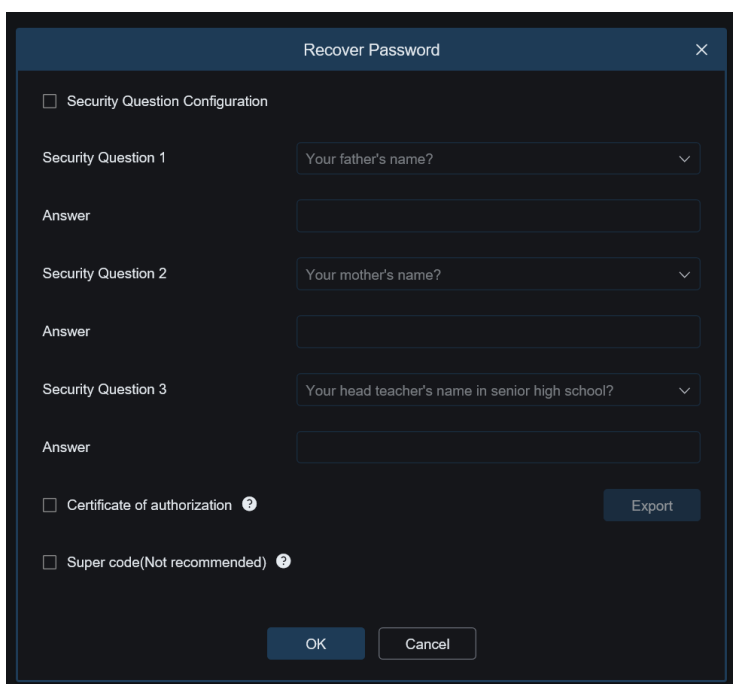

### 6.2.3 Search Tab

IP configuration can be done on this tab. Simply click the camera and change IP setting by changing values in the bottom field.



Manual and DHCP settings are available for this camera. By default, it is set to 192.168.1.168 when it is in static mode.


**Note:** Batch IP setup is not supported. When multiple cameras are being set up for the first time, it has to be set up one by one by accessing 192.168.1.168

### 6.2.4 Upgrade Tab


Upgrade for a device or multiple devices are available on this tab.

The latest firmware version is available at [www.idisglobal.com](http://www.idisglobal.com)

1. Select Camera from the device list and select firmware file on the bottom.

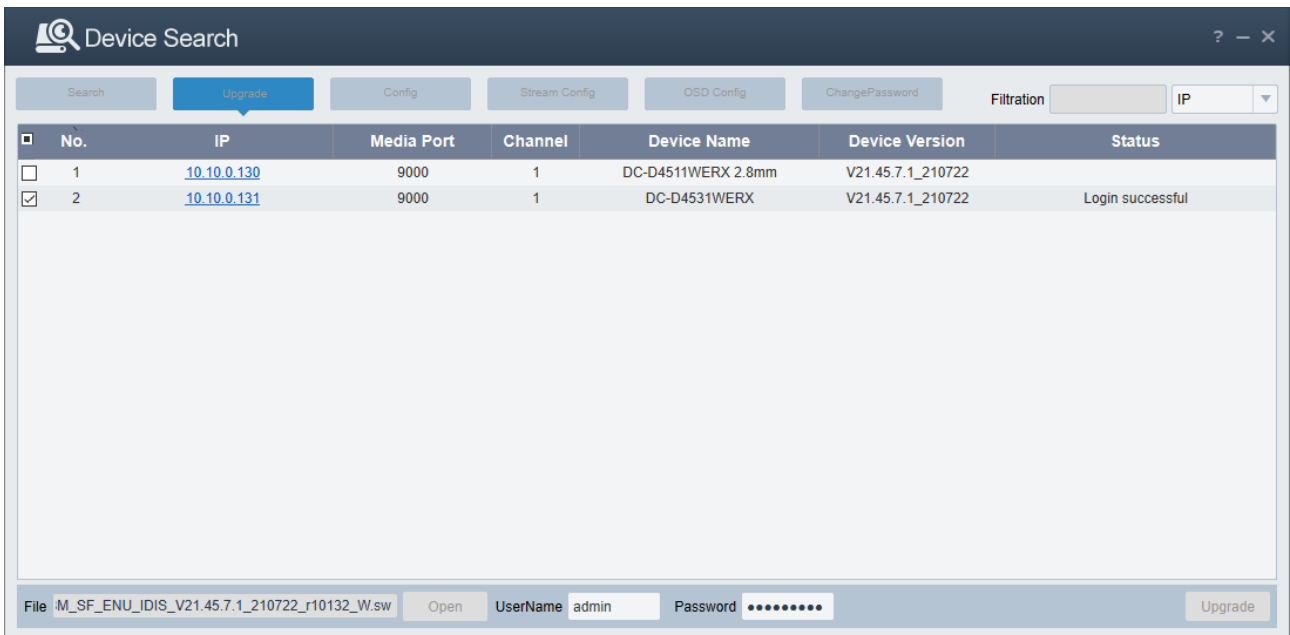

2. Enter login detail on the bottom field and click Upgrade

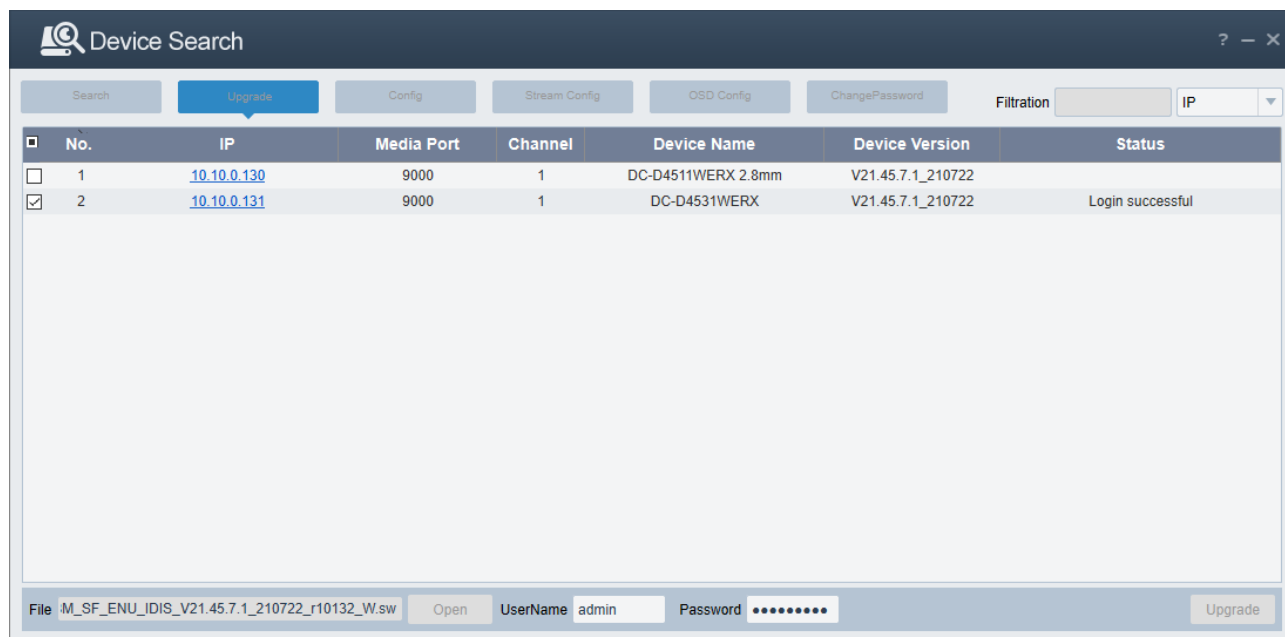

3. Status will be changed during the upgrade process.

### Login

Device Name	Device Version	Status
DC-D4511WERX 2.8mm	V21.45.7.1_210722	
DC-D4531WERX	V21.45.7.1_210722	Login successful

### File transferring

Device Name	Device Version	Status
DC-D4511WERX 2.8mm	V21.45.7.1_210722	
DC-D4531WERX	V21.45.7.1_210722	Update progress:53


### Upgrade complete

Device Name	Device Version	Status
DC-D4511WERX 2.8mm	V21.45.7.1_210722	
DC-D4531WERX	V21.45.7.1_210722	transferred successfully. Please don't power off the camera during firmware ...

## 6.2.5 Config Tab

In this tab, device reboot, password change, and load default setting can be done.

a. Device reboot

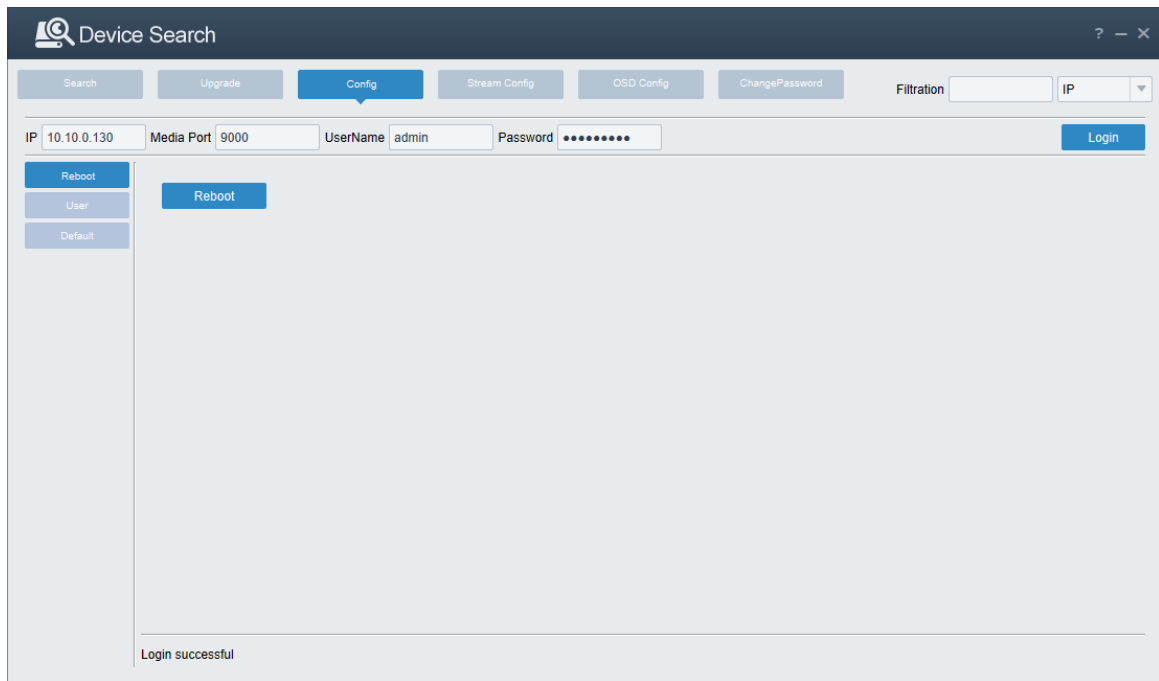


First, input camera information click login, if the information is correct, Login successful message will be displayed on the bottom.

Click Reboot to reboot a camera.

b. Password change

Click User tab from the left menu.

Input password and click Set

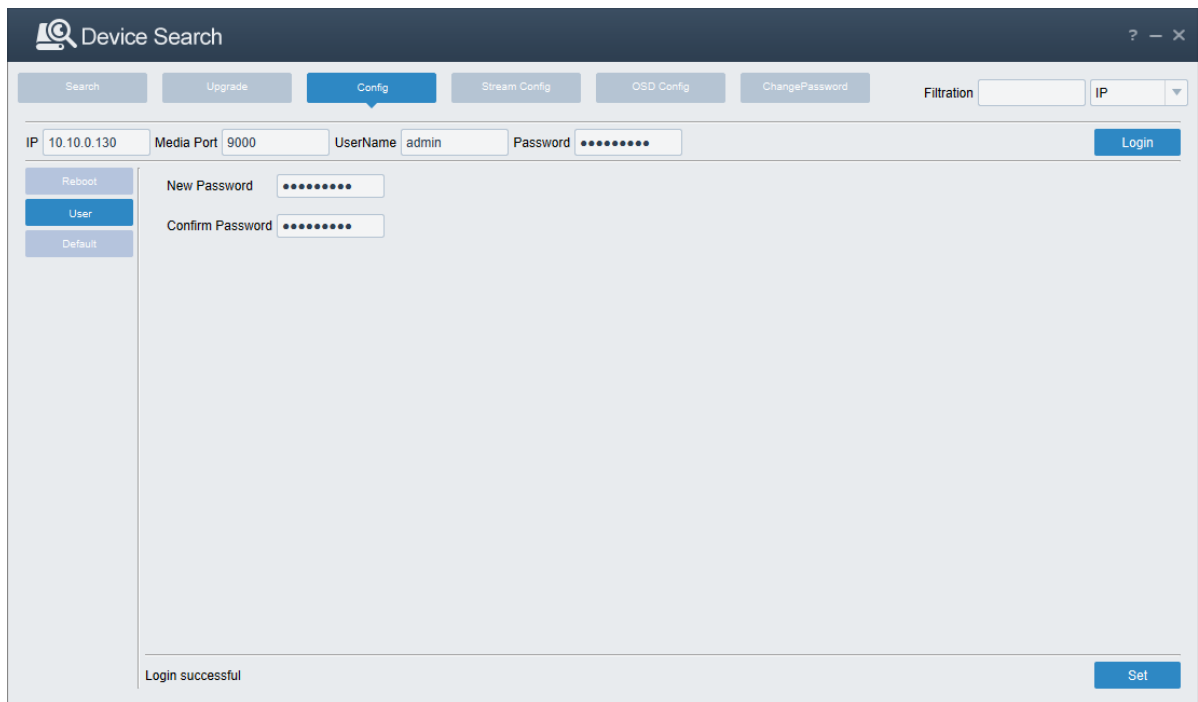


Login successful message will be displayed when the password is changed.

c. Load default setting

Click Default tab from the left menu.

Select desired components from the list and click Set

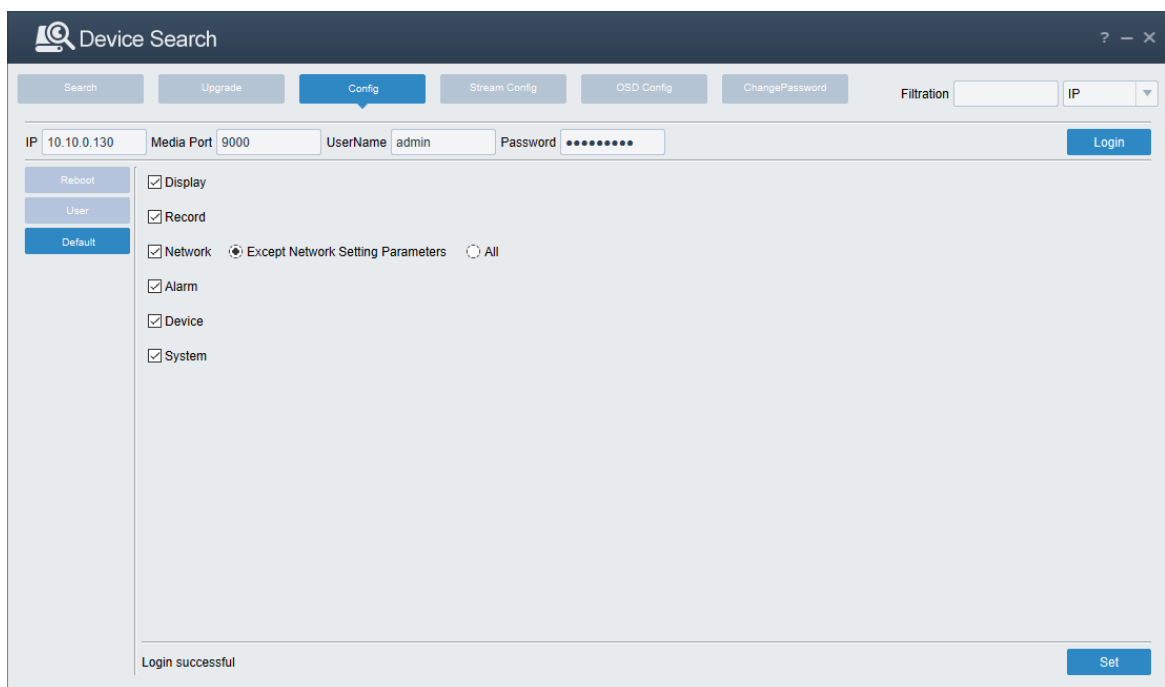


Set Parameter Succeed! Message will be displayed when the settings are changed successfully.


### 6.2.6 Stream Config Tab

Changing Stream settings for multiple cameras is available on this tab. To apply settings for multiple cameras, the cameras should have the same password.

- a. Select a camera from the list that has desired stream profile. Enter login detail and click Query to load stream profile.

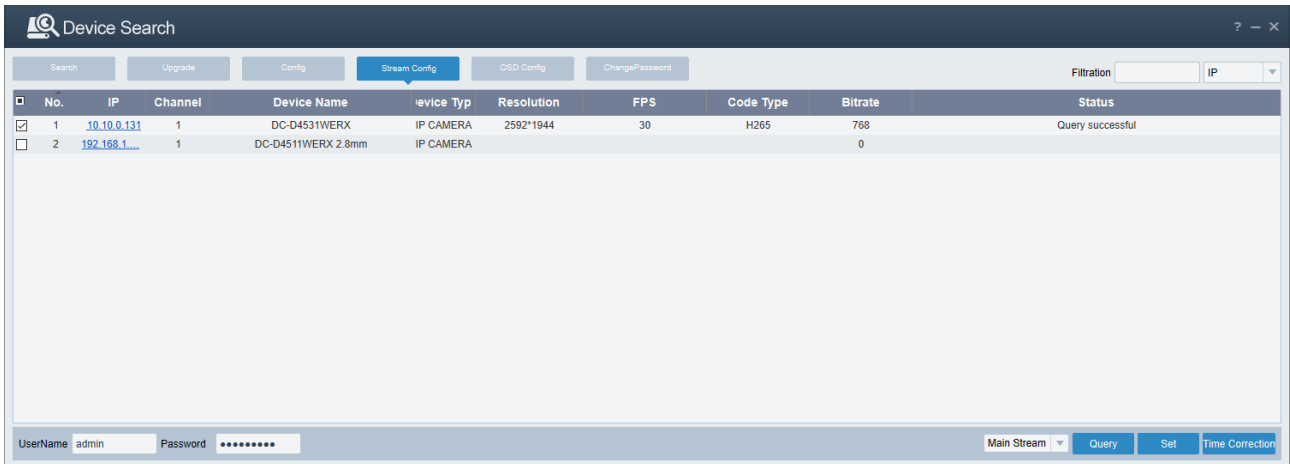

- b. Select cameras from the list that requires setting change and click Set to apply settings.

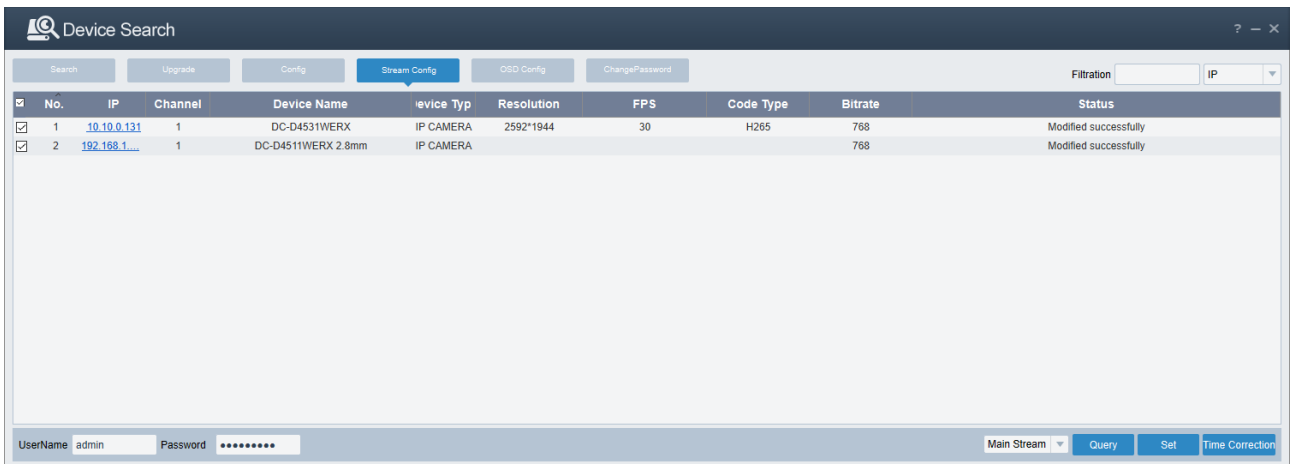


Modified Successfully message is displayed.

- c. The time correction button refreshes and synchronizes the time with NTP server.


### 6.2.7 OSD Config Tab

On-Screen Display feature is provided by default for DC-D4511WERX and DC-D4531WERX, and this tab present singular or multiple OSD setting changes.


- a. **Changing OSD value:** Select target cameras and set OSD info values and click Set

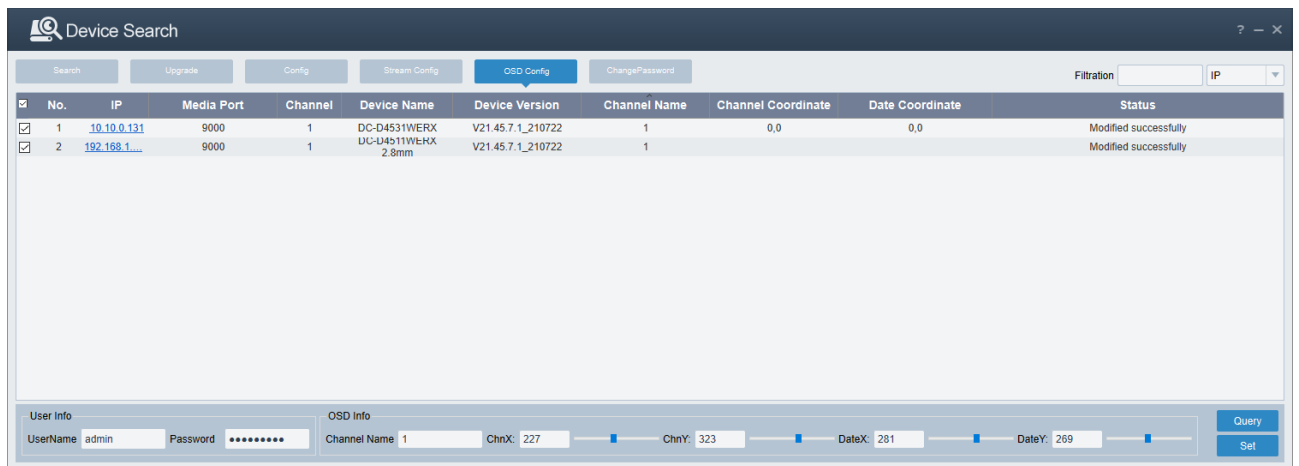

- b. **Copy and paste settings:** Select a camera from the list that has desired OSD settings. Enter login detail and click Query to load OSD settings.

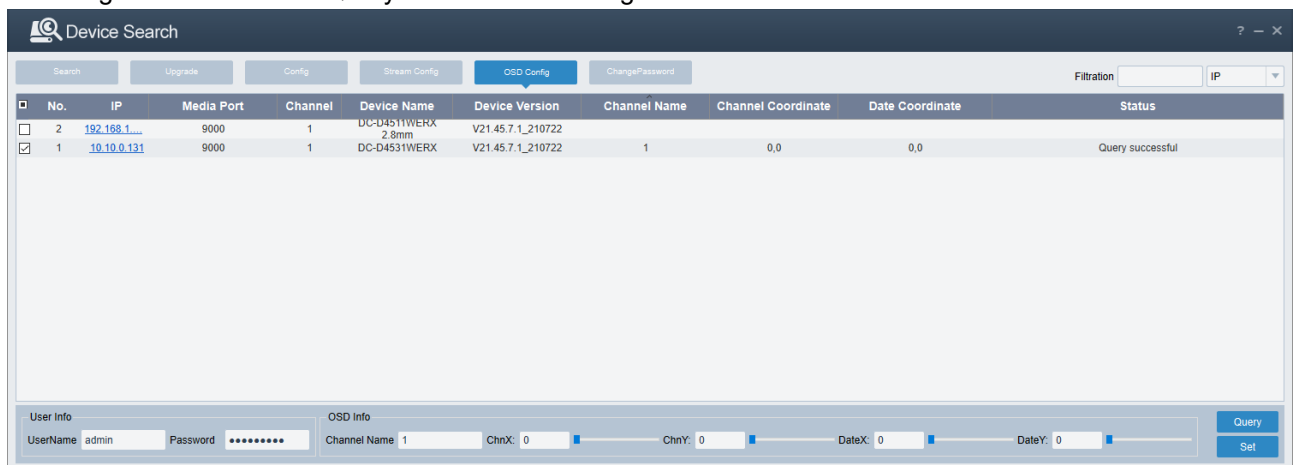

- c. Select cameras from the list that requires setting change and click Set to apply settings.

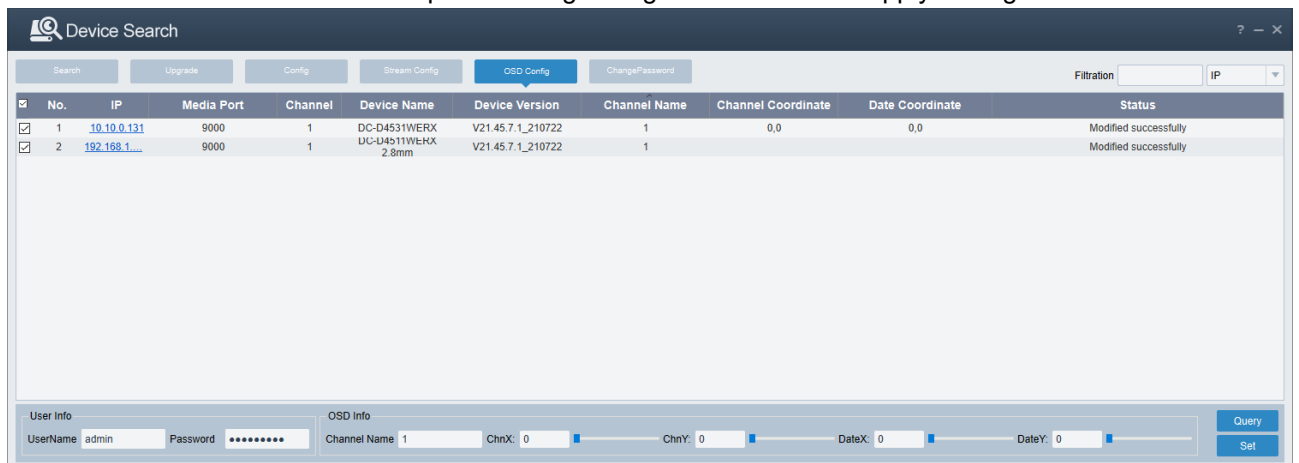


Modified Successfully message is displayed.

## 6.2.8 Change Password Tab

Changing Password for multiple cameras is available on this tab.

- a. Select target cameras.
- b. Enter the current password and new password and click Modify.

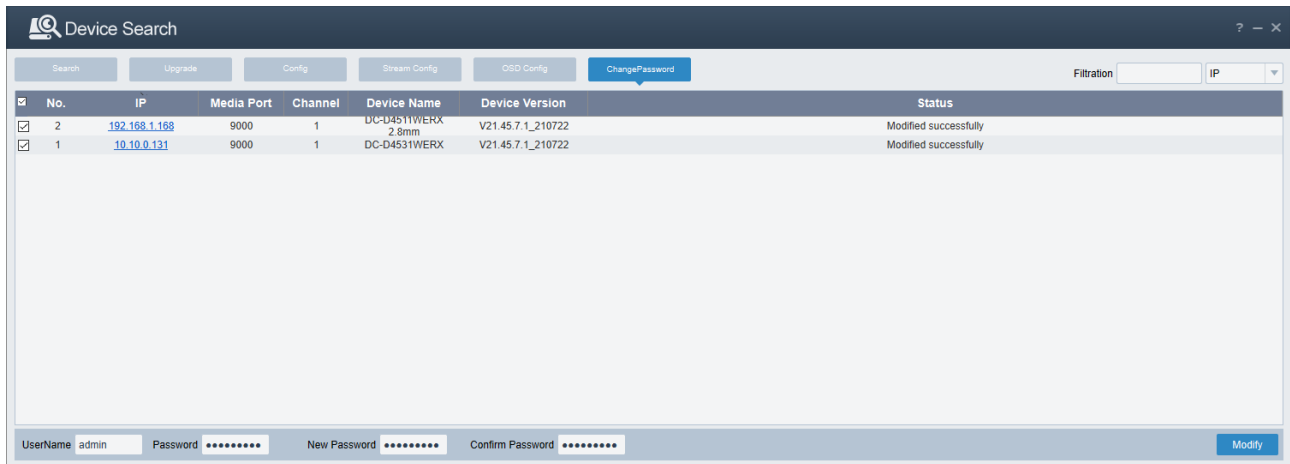

Modified successfully message will be displayed when it is done successfully.


### 6.3 Camera Webpage

Most camera settings need to be done on camera webpage. Details about camera settings will be explained in this chapter.

Currently, only Internet Explorer is supported for camera Live monitoring on the **web**.


#### 6.3.1 Live Tab

After login, live video screen will show up.

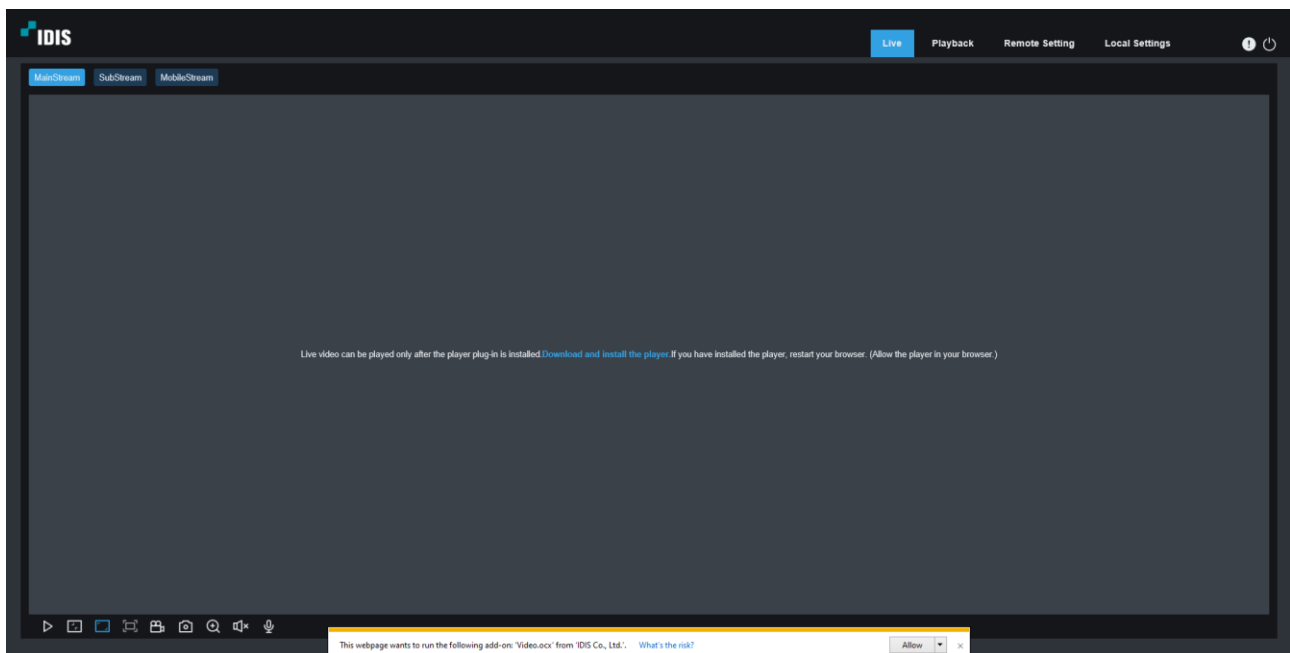



If the plugin is not installed, install the plugin to view live streaming.

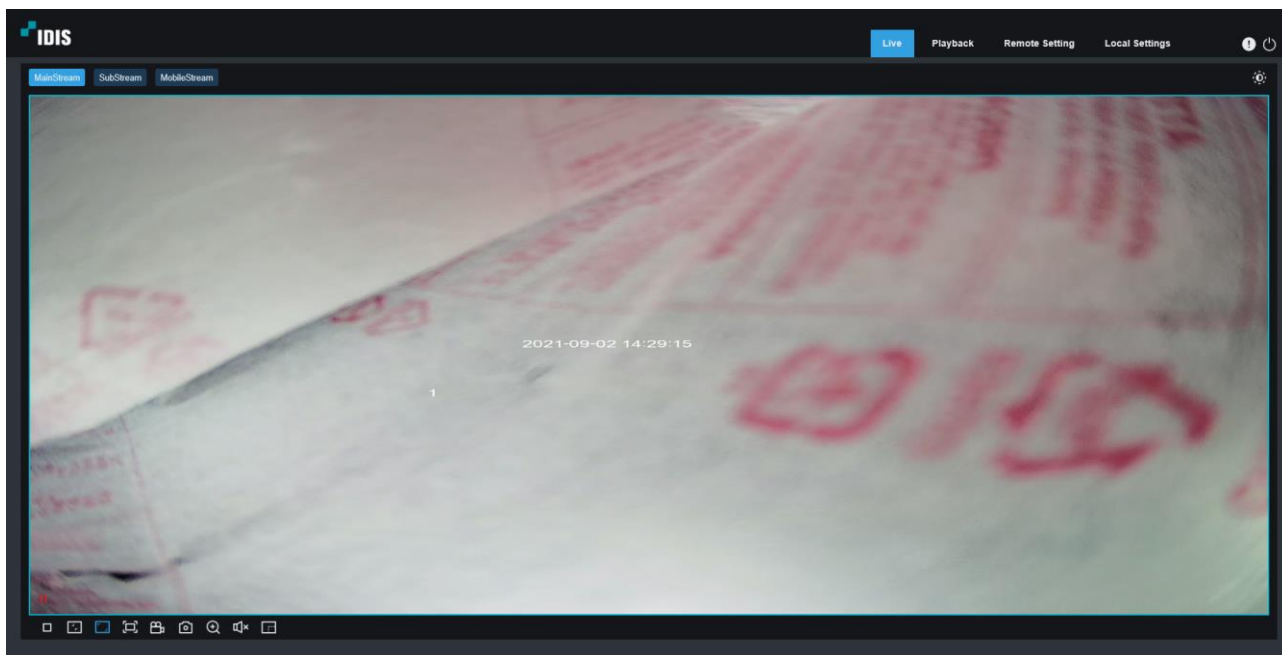

### 6.3.2 Playback Tab


Browsing SD card recording is available on this tab.

\*Please note that this is not compatible with IDIS products\*




### 6.3.3 Remote Setting Tab(Camera Configurations)

Main settings for NVR recording are available on this tab.

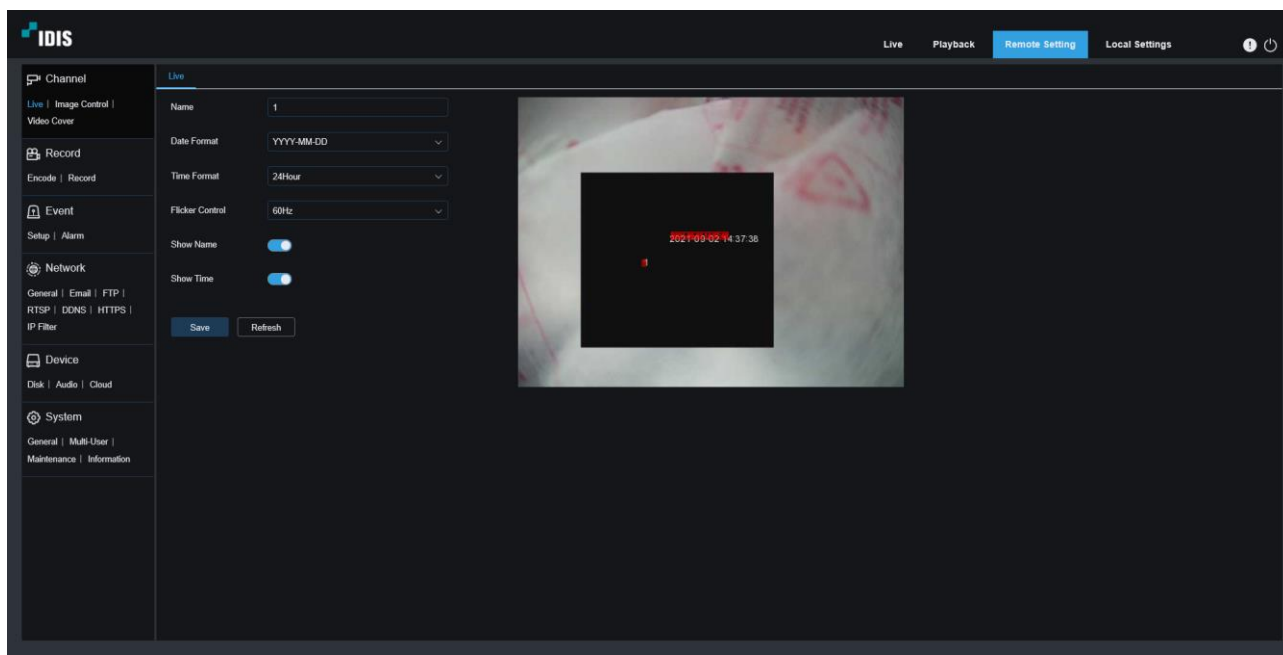


The following list of settings is available.

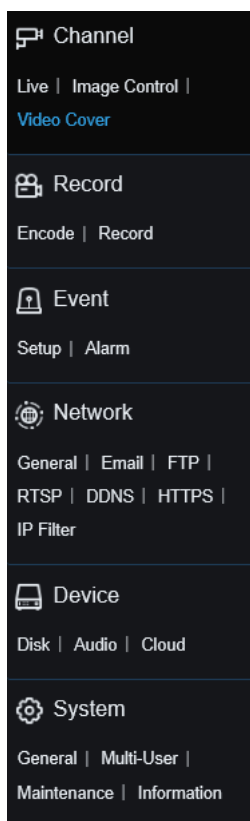


### 6.3.4 Channel Settings

Live, Image Control, and Video Cover options settings are available in this section.


a. Live

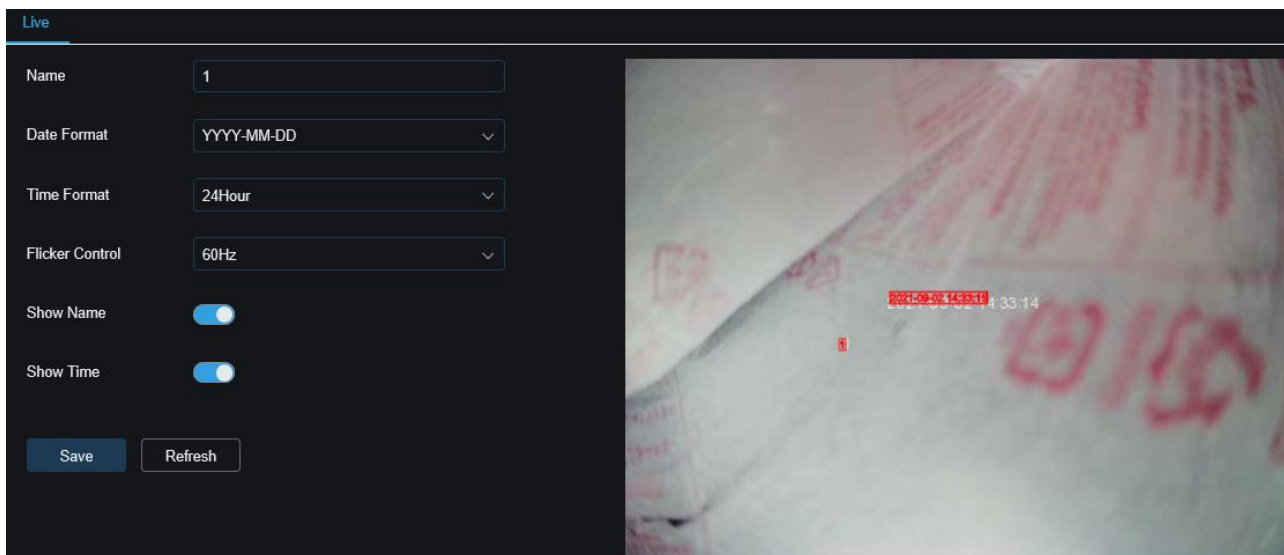

b. Image Control

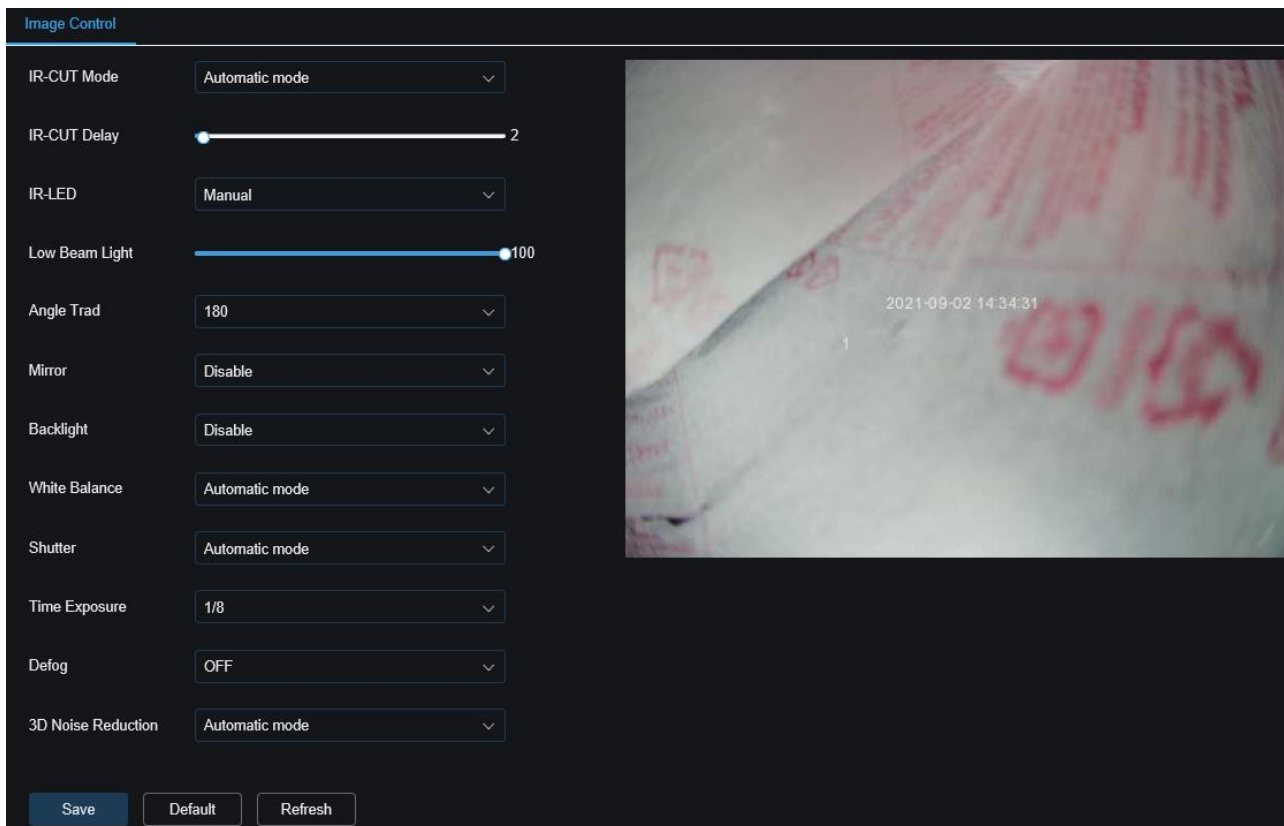


c. Video Cover(Masking option)

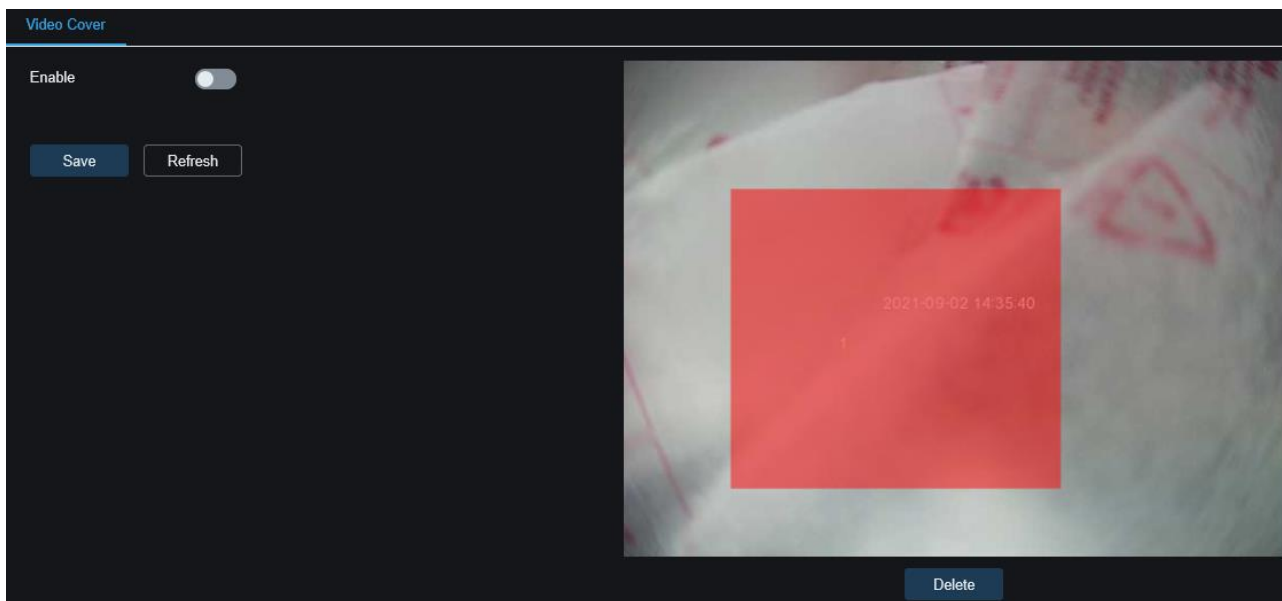


### 6.3.5 Record Settings(Stream Profile settings)

Encode(NVR recording), Record(SD card recording) settings are available in this section.


a. Encode

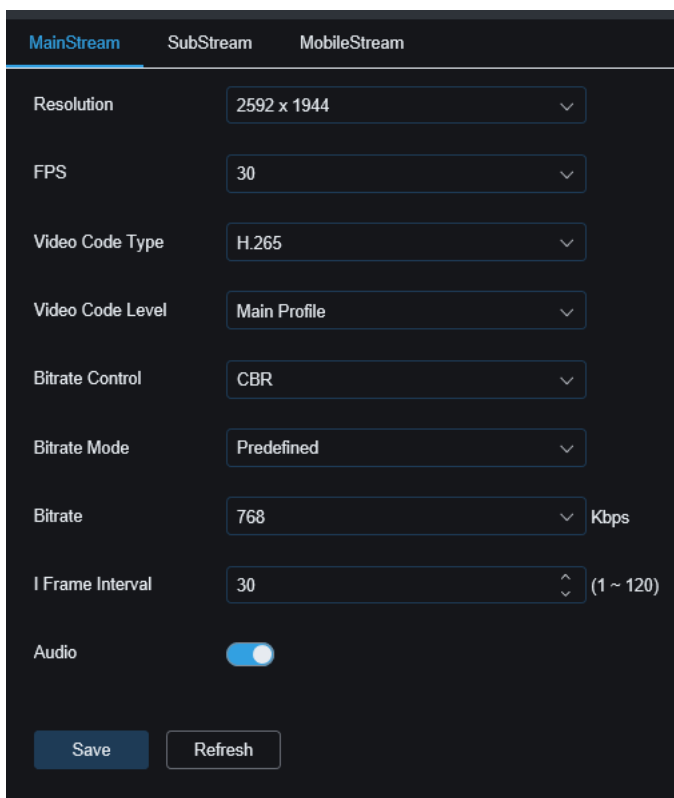

b. Record

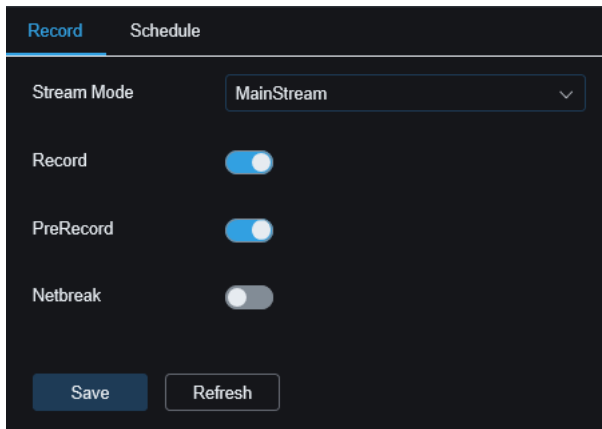


Recording Schedule

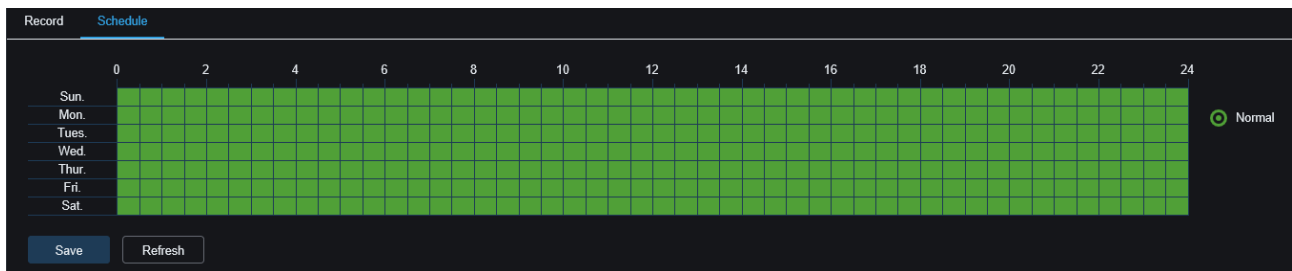

### 6.3.6 Event Settings

Motion event and Alarm(notification) are available in this section.

a. Motion

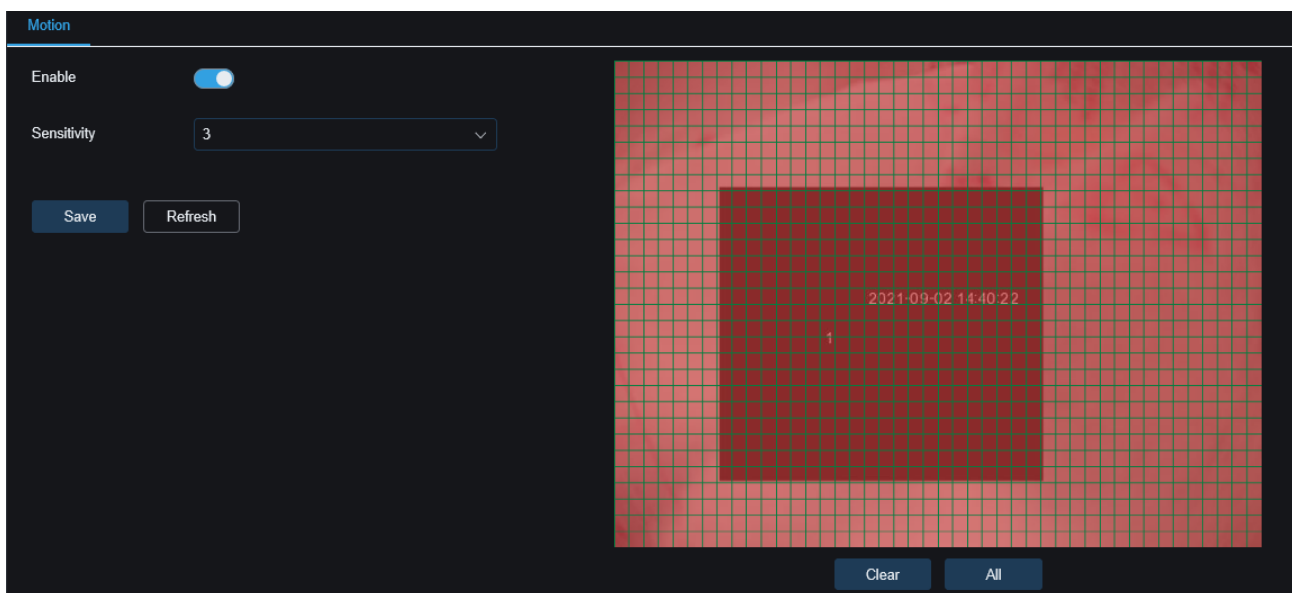

b. Alarm

The screenshot shows the 'Motion' configuration page. It includes the following settings:

- Post Recording: 5 S (dropdown menu)
- Send Email:
- FTP Picture Upload:
- Cloud Picture:
- Enable Record:

Buttons at the bottom: Save, Schedule, Refresh.

### 6.3.7 Network Settings

General, Email, FTP, RTSP, DDNS, HTTPS, and IP filter settings are available in this section.

a. General

The screenshot shows the 'General' network configuration page. It includes the following settings:

- DHCP:
- IP Address: 192.168.001.168
- Subnet Mask: 255.255.255.000
- Gateway: 192.168.001.001
- DNS 1: 192.168.001.001
- DNS 2: 008.008.008.008

Section: Multicast

- Main stream:
- Multicast Address: 239.255.255.255 (224.0.0.0~239.255.255.255)

Buttons at the bottom: Save, Refresh.

b. Email

**Email Configuration**

Email

Encryption OFF

SMTP Port 25 (1 ~ 65535)

SMTP Server

Username

Password

Sender

Receiver 1

Receiver 2

Receiver 3

Interval 3Min

Save Test Refresh

c. FTP

**FTP**

FTP Enable

Server

Port 21 (1 ~ 65535)

Username

Password

Transfer images

Save Refresh

d. RTSP

**RTSP**

RTSP Enable

Anonymous Login  (No username or password required)

Instruction:  
rtsp://IP:Port/rtsp/streaming?channel=1&subtype=A  
A: 0(main stream), 1(sub stream), 2(mobile stream)

e. DDNS

**DDNS**

DDNS

Server

Domain

Username

Password

f. HTTPS

**HTTPS**

Certificate Type

g. IP filter

**IP Filter**

Enable

Type  Enable Allow List  Enable Block List

Restricted Type

No.	<input type="checkbox"/>	Start Address	End Address	CON.
No data available				



### 6.3.8 Device Settings

Disk, audio, and cloud settings are available in this section.

a. Disk

Disk

No data available

Overwrite: Auto

Save Format Hard Disk Refresh

b. Audio

Audio

Enable Audio:

Output Volume: 5

Input Volume: 5

Audio Code Type: G711A

Save Refresh

c. Cloud

Cloud

Cloud Storage:

Cloud Type: DROPBOX

Driver Name: IP CAMERA

Save Activate Cloud Refresh

### 6.3.9 System Settings

General, Multi-User, Maintenance, and Information settings are available in this section.

a. General

Date and Time

**Date and Time** Daylight Saving Time

Time setting mode  Static  NTP server synchronization

Date Format

Time Zone

Time Format

System time

Server Address

Daylight Saving Time

Daylight Saving Time   Set by week  Set by date

Start Time

End Time

Time Offset

b. Multi-User

NO.	Username	Level	Status	Password	Policy
1	admin	admin	Enable		
2	user1	user1	Disable		
3	user2	user2	Disable		
4	user3	user3	Disable		
5	user4	user4	Disable		
6	user5	user5	Disable		
7	user6	user6	Disable		

c. Maintenance

Log

Log Load Default Upgrade Parameter Management Auto Reboot

Log Type  Search

Start Time

End Time

### Load Default

Log Load Default Upgrade Parameter Management Auto Reboot

All

Channel

Record

Event

Network

Device

System

Save Refresh

### Upgrade

Log Load Default Upgrade Parameter Management Auto Reboot

Path  ... Upgrade

Don't close the browser or turn off the power when updating!

### Parameter Management

Log Load Default Upgrade Parameter Management Auto Reboot

Import File  Import

Export file name  Export

### Auto Reboot

Log Load Default Upgrade Parameter Management Auto Reboot

Auto-maintenance

Time Week

Sun.

00 : 00

Note: The system will restart at some random time within 2 hours after the set time point

Save Refresh Reboot

d. Information

Information

Device ID	000000
Device Name	DC-D4511WERX 2.8mm
Device Type	IP CAMERA
Hardware Version	RS-CM-361C
Software Version	V21.45.7.1_210722
Web Version	V1.0.0.123_210722
MAC Address	00-23-63-90-88-1B

Refresh

[End of Document]

## Version History

Version	Writer	Revision Date	Remarks
1.0.0	Jungsoo Yoon	Sep. 8. 2021	Initial Release